

PARTNUMBER	DESCRIPTION
00033063	Life Raft
0074-20	Hand Fire Extinguisher Halon 1211
0101KIP05-015	Processor Totalizer Combined
0102AW1AF-1	sensor, Total Temperature
01-0770028-05	Strobe Power Supply
01-0770285-21	Strobe Light
01-0790099-00	Power Supply
0108086-05	Restraint assy
0108900-15	F/O Restraint
0108900-49	Safety Belt Co Pilot
011-00490-00	Transponder, GTX 327
011232-100	Recirculation fan
011260-100	Extract Fan
011291500	Fan
011389502	Fan Ground
011390500	Fan, Recirculation
011749500	Fan Cooling
0118026-05	Restraint
019059-10	Gimball Assy
01N65900	ELT ADT406
0212KTU-10	Probe fuel quantity
026-35-2-999-3211	Hmec-26 Headset (ANR & XLR-5)
03-1805-2001	Light Anti Collision (ACL-1000)
03-2103-2003	Light Anti-Collision (ACL-1000)
03344-106	Ballast Fluorescent Dimming 5106 Lamp
040000-1	Light Assy
04-1504-1429	Power Supply Strobe Light (ACL-1000)
04-1504-5428	Anti Collision Power Supply
04-1505-3528	Power Supply
04-1604-1429	Power Supply Strobe Light (ACL-1000)
046-35-1-999-1191	Headset with ANR and Cable B-K
046-35-1-999-3211	Headset with ANR and Cable CP
046-55-999-0131	Headset
0560-0490	Test Set
060-0015-00	Directional Gyro
064-1009-00	Transceiver VHF Comm KTR905
064-1015-00	Receiver/Exciter HF KTR-953
064-1015-01	Receiver/Exciter HF KTR-953
064-1016-00	Control Unit HF KCU-951
064-1016-01	Control Unit HF KCU-951
064-1016-03	Control Unit HF KCU-951
064-1017-00	Coupler/Amplifier HF KAC-952
064-1017-02	Coupler/Amplifier HF KAC-952
064-1019-01	VHF Comm Transceiver
064-1023-00	Transceiver VHF KTR 908
064-1023-02	Transceiver VHF KTR 908
064-1047-02	Transceiver VHF VC-401B
064-1047-32	Transceiver VHF VC-401B
065-0019-04	KAC 0325 Auto Pilot Computer
065-0053-08	Altitude Selector
065-0064-01	Flight Computer
066-01078-0010	NAV Receiver
066-01127-1101	ATC Transponder
066-01127-1402	Transponder
066-01153-0101	Radio Altimeter Box
066-01171-1704	Traffic Advisory Vert Speed Ind

PARTNUMBER	DESCRIPTION
066-01171-2804	Vertical Speed Indicator IVA-81D
066-01171-3404	Indicator TCAS/VSI
066-04031-0211	GPS 5V BLK, KLN90A
066-04031-1122	GPS Unit, KLN90B
066-04034-0102	KLN900 GPS
066-04034-0104	GPS Processor
066-04035-1101	Multi Function Display
066-1023-00	Receiver ADF KR-85
066-1041-00	Transponder ATC
066-1047-01	ADF Receiver KDF805
066-1048-00	Radar Altimeter KRA405
066-1048-02	Altimeter Radio KRA405
066-1055-70	AUDIO CONTROL,KMA24H
066-1066-02	Transceiver DME (KDM 706)
066-1066-22	Transceiver DME (KDM706A)
066-1066-23	Transceiver DME (KDM706A)
066-1066-24	KDM-706A transceiver
066-1066-25	Transceiver DME (KDM706A)
066-1069-00	Indicator DME (KDI 572)
066-1071-00	Transponder ATC KXP 756
066-1072-00	Receiver ADF KR 87
066-1077-00	Receiver ADF KDF 806
066-1077-01	Receiver ADF KDF 806
066-1078-04	Receiver Navigation KNR 634
066-1078-10	Receiver Navigation KNR 634A
066-1101-00	Receiver Navigation VN-411B
066-1101-31	Receiver Navigation VN-411B
066-1103-00	Transponder, ATC
066-1105-00	Receiver ADF
066-1107-00	Transceiver DME
066-1126-00	Receiver, VHF NAV
066-3012-01	market Light Assy
066-3020-11	Flight Command Indicator
066-3025-01	Indicator Navigation (KI 214)
066-3031-01	Radar Altimeter Indicator KNI-415
066-3034-02	Indicator Navigation (KI 204)
066-3038-00	Indicator Radio Magnetic (KI229)
066-3046-01	Indicator Pictorial Navigation (KI525A)
066-3046-03	Indicator Pictorial Navigation (KI525A)
066-3046-07	Indicator Pictorial Navigation (KI525A)
066-3060-00	Indicator Radio Magnetic (KNI 582)
066-3062-00	Altimeter
066-3081-01	Indicator
066-3084-32	Indicator radar IN 182A
066-3086-00	Indicator Radar IN 862A
066-3086-01	Indicator Radar IN 862A
066-4012-52	Display unit control
066-4030-00	Computer, Navigation
066-50000-2120	TCAS Processor
066-50001-1003	Indicator, Vertical Speed
066-50001-2804	TCAS/VS Indicator
066-50029-1101	RCVR
069-01032-0101	Transceiver, NAV/COM 25KHZ
069-1019-01	Transceiver NAV/COM KX 175B
069-1025-25	Receiver, VHF NAV
071-01284-0029	ADF KFS586A
071-01503-0201	Control panel, ATC

PARTNUMBER	DESCRIPTION
071-01519-0101	Transceiver Radar ART-2000
071-01548-0100	Antenna TCAS
071-1041-01	Converter Voltage DC (KA-39)
071-1052-00	Valve, Flux
071-1054-02	Control Panel, VHF NAV KFS-560B
071-1210-08	Control Unit ADF KFS 586
071-1210-09	Control Unit ADF KFS 586
071-1210-17	Control Unit ADF KFS 586
071-1215-64	Control Unit VHF KFS 598
071-1216-20	Control Unit KFS 564
071-1216-26	Control Unit KFS 564
071-1234-00	Antenna ADF KA 44B
071-1242-06	Slaving Unit
071-1271-01	Capacitor External KA 161
071-1282-65	Control Unit VHF KFS 598A
071-1282-71	Control Unit VHF KFS 598A
071-1282-75	Control Unit VHF KFS 598A
071-1282-80	Control Unit VHF KFS 598A
071-1283-12	Control Unit NAV KFS 564A
071-1283-26	Control Unit NAV KFS 564A
071-1284-04	Control Unit ADF KFS 586A
071-1284-17	Control Unit ADF KFS 586A
071-1284-29	Control Unit ADF KFS 586A (NVG)
071-1290-20	Antenna
071-1313-20	Radar Grap Unit
071-1313-23	Radar Graphic Unit
071-1319-00	Transceiver Radar RS 861A
071-1341-1	Control Panel, VHF com
071-1341-16	Control Unit COM (CD 402B)
071-1347-16	Controller, ADF
071-1350-03	Selector, DME display
071-1350-04	Selector, DME display
071-1377-00	Control Unit NAV (CD-413B)
071-1377-01	Control Unit NAV (CD-413B)
07311P000-01	Flap Jackscrew
080-20710-01	Controller Windshield
080-903-002	Fuel tank harness
0856AE19	Pitot Tube
0860190003	Accumulator
0860197001	Accumulator
0860197-001	Accumulator
0860199001	Accumulator
0871BN3-3	Ice Detector
0871BN3-5	Detector, Ice
0871DF1-1	Detector Ice
0871DW1	Detector Ice
0871FN2	Ice Detector
08748/9-231-23	Transmitter Fuel Flow
0900-1840-22	Supply Emergency Power (EPU28-24)
09-530-0102	Lighted Push Button Switch
09-530-0108	Lighted Pushbutton Switch
1/2-2-81-301	Fuel flow transmitter
10000165-101	AOA Transducer
1000424-1-001	EEC
10-0055-11	Light Emergency Exit
10010-0000-02	Indicator Fuel Quantity
1001050-4-13	Controller AMS Processor Board

PARTNUMBER	DESCRIPTION
1001050-6-013	Controller AMS Processor Board
1001050-6-015	Controller AMS Processor Board
10013-0000-02	Indicator Fuel Quantity Primary
10014-0000-02	Indicator Fuel Quantity Repeater
1-002-0102-1830	Static Inverter
10026	Alternator
10033-0000-02	Indicator Hydraulic Oil Quantity
10034-0000-02	Indicator Hydraulic Oil Quantity
10035-2000-03	Summation Unit Fuel Computerized
10037-0750	Indicator Fuel Quantity
10037-0770	Indicator Fuel Preselect
10037-1000-0154	Indicator Fuel Quantity
10037-1000-0156	Indicator Fuel Quantity
10037-1000-0158	Indicator Fuel Quantity
10042-0000-0101	Indicator Torque
10044-0000-01	Indicator Fuel Quantity
10051-0000-01	Engine Oil Quantity
100-5383Y-00	LDG Selector Valve
10054-0000-01	Indicator Oil Quantity
10055-0000-02	Indicator Fuel Quantity Master
10056-0000-01	Indicator Fuel Quantity Repeater (KG)
100-601177-002	Engine rating sel panel
10065-1000-0303	Indicator Fuel Quantity
10065-1000-0403	Indicator Fuel Quantity
10065-2403-02	Relay Lamp Driver
10065-2470-0405	Card Fuel QTY Independant
10065-3000-01	Control Unit Fuel Preselect
10065-3000-02	Control Unit Fuel Preselect
10065-4000-0405	Electronic Unit
10065-5000-01	Densitometer Assy
10065-5000-02	Densitometer
10078-0101	Indicator Load Select
1007KCA1	Compass, Standby
10080-0101	Fuel Qty Ind. Module
10080-0201	Fuel Quantity Indicator
10087-0102	Indicator Fuel Multitank
10088-0102	Indicator Fuel Quantity Preselector
100880-RFX-01	Weighting AC Kit
10088-RFX-01	Weighting AC Kit
10091-01	Indicator Fuel Quantity Primary
10092-01	Indicator Fuel Quantity Repeater
1009350-2	Geneva Lock Actuator
100-9750	Fire Extinguisher
101-00184	Test Set, Pitot Static
101-00850	Test Set, Fuel Quantity
101-00901	Test Set Temperature
10-1096-02	Detector Fire Overheat
10-1097-02	Detector Fire Overheat
10-1098-01	Detector Fire Overheat
10-1099	Detector Fire Overheat
10115-01	Indicator Fuel Quantity Primary
1012974-2-001	EEC
1012974-2-002	Control, Engine Electronic
1012974-4-002	EEC
1012974-5-002	EEC
101-380091-5	Indicator, Torque
101-384137-3	Switch

PARTNUMBER	DESCRIPTION
101450-11953	Encoding Altimeter
10151N01T00	Indicator Temperature Interturbine
10166N01N00	Indicator Rudder Trim
10169N01R00	Indicator RPM Propeller
10169N02R00	Indicator RPM Propeller
10169N02R00 MOD A	Indicator, RPM Propeller
10169N03R00	Indicator RPM Propeller
1017097-1	Temperature Sensor
10171N01F01	Indicator Fuel Flow
10171N03F02	Indicator Fuel Flow
10171N03F03	Indicator Fuel Flow
101720-11810	Indicator Altimeter
101730-01419	Altimeter
1017-41-111	FMS, CDU
10174N04W02	Indicator Torque Engine
10174N07W04	Indicator Torque Engine
10174N10W03	Indicator Torque Engine
10175N01T00	Indicator Temperature Interturbine
10176N02R00	Indicator RPM NL%
10177N01R00	Indicator RPM NH %
10177N02R00	Indicator RPM NH %
10181N01R00	Indicator RPM % Prop
10183N02W01	Indicator Torque (120%)
10183N03W02	Indicator Torque (200%)
10183N04W02	Indicator Torque (120%)
102-0064-02	Indicator Attitude (RCA26AK-4)
102-00876	Test Set, Fuel Quantity
102-2100	Indicator Radio Altimeter
102210-15	Controller Pressure Cabin
102220-11886	Encoding Altimeter
1024PG/SB	Inductor Pressure Transm
102644-7	Controller, Cabin Pressure
102EH2BH	Probe, TAT
102EH2EB	Sensor Tat
102EU2BF	Sensor
102LA2AG	Probe Total Air Temp
103-020-0	Hall Effect
103646-4	Valve Outflow
103672-1	Outflow Safety Valve
103672-2	Valve, Outflow
103682-1	Valve
10-381550-1	Exciter Ignition
10-381550-22	Ignition Exciter
10-381550-4	Exciter Ignition
10-381750-2	Exciter Ignitor APU
10-381750-6	Ignition Exciter
10-383160-3	Exciter Ignition (TGLN-31)
10-397050-1	Ignition Exciter
10470-2	Pump Motor
10470-6	Motor Driven Hydraulic Pump
1048A0000-04	Actuator Flap
105-003-2	BPCU
1050A0000-03	Flap Control Unit
1050A0000-04	Flap Control Unit
1050A0000-05	Flap Control Unit
1058A0000-03	Actuator Roll Spoiler
1059A0000-03	Ground Spoiler Actuator

PARTNUMBER	DESCRIPTION
106-000-3	Bus Power Control Unit
106-000-4	Controller
10-60517-56	Isolator
1060A0000-06	Valve Block Assy
10-61359-3	Actuator Linear
10-61445-24	Relay
10-614950-1	Exciter, Ignition
10-617075-6D	Ignition Exciter
10-631045-2	Exciter Ignition (TFN-30)
106CP01Y05	Transmitter, Torque Meter
10736-A	Temperature Indicator
107484-5	Regulator
10800C-2F	Smoke mask
108032-3	Regulator Diff. Pressure
10839F	Heater Oil
10841B	Oil Cooler - Fuel
10879P	Fuel Heater
109812-13	Shutoff Valve
1103040-121	Timer
1103480-120	Electronic Box
1103480-121	Electronic Box
110VU01-62004	Fan
111303-4	Attitude Indicator
112052-01	Regulator Altitude Compensating
11225-1	Coffee Maker
11389-2	Sensore Pressure
1140-0183-4	Fuel measuring stick
1140-0183-7	Stick
114-380028-9	Blower Assembly
114-380059-5	PRSOV
1152106-3	Generator DC
1152400-3	Generator DC APU
1152466-250	Start Converter Unit
1153426-1M232	ELT Rescue 406SE
11555-7	CDU Controller
1157060	Element Assy MK 57 Valve
1159SCP408-1	Actuator, Sec Lock
1170-001	APU Hour Meter
11722A	Power Sensor
118-000-1	DC GCU
1180002-403-100	Crew Restraint System
118-389004-13	Fuel Probe
118-389004-25	Fuel Probe
118-389004-41	Fuel Probe
118-389004-43	Fuel Probe
118-389004-45	Fuel Probe
118-389004-47	Fuel Probe
118-389004-49	Fuel Probe
119003-11	PBE Hood
1192-00-111100	Computer Unit
1192-00-111106	Unit, UNS-1D Nav Computer
1209-100	Switch, Pressure
1211444-001	Actuator
121630-006	Aircraft Battery Charger/Analyzer: RF80-K
122723-200-02.	Pump, Fuel Boost
122GA01Y03	Protector, Ground Power
1234A0000-01	Rudder Damper

PARTNUMBER	DESCRIPTION
1234T100-8ATZ	Indicator Turn & Slip
123874-1-1	Valve Check
1239	Starter
123CH1A	Detector, Low Flow
124.987-4	Indicator, Brake Temp
125810-3	HSI
1291M28G16	Blocker door assy
129-380016-1	Power Distribution Unit
129-389000-3	Cross Transfer Valve
129552-1-1	Thermostat Control APU
12D1017-1	Drain Valve
12D117-4	Valve Drain Water System
130374-37	Outflow Valve Control
1303910-100	LCD Monitor
1303910-101	LCD Monitor
130595	Shut Off Valve
1306-918	Relief Valve
134TS05H9V3AAB	Panel Central Warning
13720	Rate Gyro
1372-1-101	Detector, Limit RPM
1372-1-5	Detector, Limit RPM
1374M96P01	Sensor, Core Speed
137600-1	Actuator Linear Assembly
13C13502A3	Valve, Bypass Start
13TX5315A	Tandem Transmitter
140-025-2	Sensor Speed
1407KID-02-03	Fuel Qty Indicator
1426-1Z-A1	Indicator Air Speed
14328-033	Toilet Motor Pump Filter Assy
14328-056	Toilet Timer
14328-064	Motor Adapter Assy
14330-190	Flush Control
14330-350	Vaccum Generator
14400-143	Duct
145000-1	Beacon, Unit
145-78711-903	Harness W411
149155-01-02	Indicator Directeur Attitude
150-022-002	Transmitter Fuel Flow
15021-1	Alternator
150SG117Q	Starter Generator
1510S4000-008	Control Box
1511-S3000C-004	Cargo Loading Control Box
1532-12A	Valve Distribution De-Icing
1536F-1	Oven
1560	Chime
15668	Switch
15669-1	Switch
157405-03-01	TAT N1 Indicator
157PG	Pressure Switch
158210-16	Fuel and Oil Heat Echanger
158300-101	Actuator
15900-124	Timer
15900-603	Indicator, Cabin Pressure
1603-02-03	CVR
1606670-001	Cable Engine Control
1606680-001	Cable Engine Control
1606680-005	Engine Control Cable

PARTNUMBER	DESCRIPTION
16248-11	GPS Antenna
164540-303	Electronic Sequence Unit
164540-303A	Electronic Sequence
1659-1	Windshield Temperature Controller
1663214301	Probes Heat Computer
166891-01-01	Control Display unit
167N100	Pump & Motor Assy
1680-4UA2	Indicator Cabin Rate of Climb
16VE002008-4	Tank Unit
170-69819-907	Actuator Door
1708337B4	Fire Extinguisher H1-10Air
170BC101-3	Charger Airborne Battery 30/40 Amps
171497-05-01	FLIGHT MANAGEMENT COMPUTER
1716D000	Cold Air Unit
171BS101-1	Power Supply Aircraft Modular (AMPS-500)
171BS101-2	Power Supply Aircraft Modular (AMPS-500)
171BS101-M	Power Supply Aircraft Modular (AMPS-500)
1721F4	Level Sensor
172625-7	Unit Ice Valve
174252-11	Mask, Oxygen, Crew
174252-14	Oxygen mask
174260-01	Mask Crew
174260-14	Mask, Crew
174262-11	Mask, Oxygen, Crew
175-00190	TT1200 Adapter Cable
176194-76	Bottle, Assy 02
176225	Bottle, Oxygen Crew
176226-115	Oxygen Cylinder 115 Cuft
176226-77	Oxygen Cylinder
176233-50	Oxygen Bottle
176234-40	Oxygen Cylinder
1762D000-001	Cold Air Unit
176960-115-O-2D-24-30	Oxygen Cylinder Assembly
176960-44	Bottle Emergency
176961-13	O2 Cylinder
177310	Pump, Electrical Booster
1779MK2	Bearing
179290-1	Restrictor 04
17960-0102-0012	GNS-XLS
17M800-251	Flight Data Recorder
17M800-261	Flight Data Recorder
1800	Pressure Relief Valve
180-140	Hot Jug
18-1814	Transmitter, Pressure
18-2100-3	Indicator, Pressure
182400-1-1	Pre-Cooler
18-5600-1	Valve, Shutoff
18-5600-2	Valve, Shutoff
1925-00-3	PRSOV
1945G200-02NC	Actuator Electro Pneumatic
1956H000	Hydraulic Accumulator
1C27-5	Pump Fuel Electrical
1D2-17	Pump, Fuel Boost
200-040-005	Fuel Quantity Indicator
20016-0000-02	Tank Unit Oil Quantity
20022-0000-0101	Tank Unit Fuel DASH8
20022-0000-0102	Tank Unit Fuel DASH8

PARTNUMBER	DESCRIPTION
20022-0000-0103	Tank Unit Fuel DASH8
20022-0000-0104	Tank Unit Fuel DASH8
20022-0000-0105	Tank Unit Fuel DASH8
20022-0000-0106	Tank Unit Fuel DASH8
20025-0000-0105	Tank Unit
20031	Generator
20032-2	Generator AC
20036-0000-0101	Transmitter Fuel Quantity
20036-0000-0103	Transmitter, Fuel QTY
20037-0000-01	Tank Unit
20041-0000-03	Tank Unit Oil Quantity
20043-0000-01	Tank Unit Hydraulic Oil Quantity
200679206	MLG Torque Link
200740-1	Cylinder Assy
200740-2	Floot Cylinder
20079-0000-0110	Tank Unit Fuel B747-400
20081-0000-0201	Tank Unit Fuel Compensator
20081-0000-0202	Tank Unit Fuel Compensator
20097-0201	Tank Unit Fuel Compensator
20102060-103	Autobrake Valve Module
2012-1	Battery Charger Assembly
20128-0129	Tank Unit Fuel
20130-0107	Probe-Wing Tank
20136-0103	Tank Unit Outboard
20136-0105	Tank Unit Inboard
20136-0106	Tank Unit Inboard
20138-1000-0101	Tank Unit Hydraulic Oil Quantity
20138-1000-0201	Tank Unit Hydraulic Oil Quantity
20140-1000-0101	Tank Unit Hydraulic Oil Quantity
20140-1000-0201	Tank Unit Hydraulic Oil Quantity
20145-0101	Tank Unit Fuel
20146-0101	Tank Unit Fuel
20146-0102	Tank Unit Fuel
20146-0103	Tank Unit Fuel
20146-0104	Tank Unit Fuel
20146-0105	Tank Unit Fuel
20146-0106	Tank Unit Fuel
20146-0108	Tank Unit Fuel
20150-0101	Tank Unit Ultra Compensator
20151-0120	Tank Unit Fuel (A330/A340)
20151-0125	Tank Unit Fuel (A330/A340)
201530-11373	Indicator Airspeed
2015G2H2H-8	Probe, Smart
201LAAFA2	Actuator Linear
20200-0103	Tank Unit Fuel
20200-0104	Tank Unit Fuel
20200-0205	Tank Unit Fuel
20200-0206	Tank Unit Fuel
20200-0207	Tank Unit Fuel
20200-0208	Tank Unit Fuel
20200-0209	Tank Unit Fuel
20200-0210	Tank Unit Fuel
20200-0211	Tank Unit Fuel
20200-0212	Tank Unit Fuel
20202-01	Tank Unit Compensator Fuel
20-212-09	Indicator Fuel
20220-0101	Tank Unit Oil Quantity

PARTNUMBER	DESCRIPTION
2022072-4-1	Actuator Electro Mech
20258-0101	Fuel Compensator
202CC02Y1	Contactora
204-001-356-001	Arm Assy
204-010-937-9	Damper Assy Main Rotor
2041167-3704	DME Interrogator
2041167-3707	DMA 37A
2041217-0416	Radar Transceiver
2041230-3523	Receiver, ILS
2041444-0404	Antenna Drive, Dual
2043M42P02	Accelerometer
205-001-914-029	Sync Elevator Horn
205-001-914-029M	Sync Elevator Horn Assembly
20502A8	Box, Failure Advisor
206-070-265-9	Dual Tachometer
206-076-022-101	Hydraulic Pump
2061-14-1	Indicator Flap
2067631-5154	Radio Altimeter
2070410-0106	Transceiver ,Weather
2083-11-1	Mach Air Speed indicator
209-060-221-001	Starter Generator
209-060-221-1	Starter Generator
209-070-262-101	Indicator, Engine Oil
209-075-326-1	RPM Box
209-075-655-101	Indicator
209-075-658-101	Indicator Transmission Oil Temperature
2095F030800	Valve, Electro Pneumatic
2096G020800	Valve, Pneumatic Outflow
2099J020900	Valve Outflow
2100009-03-001	Harness Restraint Seat Belt
2100-1020-00	FA2100, SSCVR, 2 Hour
2100-1020-02	Cockpit Voice Recorder
2100-3073-00	Cockpit Voice Data Recorder
2100-3083-10	Cockpit Voice and Data Recorder
2100-4043-00	Flight Data Recorder
2100904-4	Vent, Fan
2101-01-2	Fuel Quantity Indicator
210625T	Governor
21140-1134-2	Indicator Airspeed
21140-1150	Indicator Airspeed
2116-40-1116	Computer Navigation
2117180-2	Cabin Pressure Controller
2117180-3	Controller
2117578-9	TMS Commputer
2117804-1	Cabin Pressure Valve
2118386-5	Panel, Selector Cabin Air Pressure
2118526-6	Controller
2118800-2	Control Unit APU Elect
2118802-5	ECU
2118966-222	ECU
212-001-747-001	Walking Beam Assy
212-040-003-23	Gear Box 42D
212-040-004-009	Gearbox
212-070-116-9	Indicator TRMP
212-070-444-001	Indicator
212-070-444-1	Sensor Remote C35D48
212-075-037-101	Indicator Producer Gas

PARTNUMBER	DESCRIPTION
212-075-199-001	Relay
212-076-004-003	Cylinder, Servo Anti-Torque
212-076-004-101	Cylinder Servo Anti Torque Control
212-076-004-3	Servo, Hydraulic
212-076-004-5	Cylinder Servo Anti-Torque Control
214-074-280-107	RPM Limit Detector
2-1543	Brake Assy
2-1549-3	Rotor
2-1599	Brake Assy
2-1605-2	Brake Assy
216BB01Y06	Circuit card assembly
219335-3	Pump
21B73-1-E	Generator control unit
21B73-2A	Gen Control Panel
2204400-4	Air Cycle Machine
220GC02Y01	DC Junction Box
2215632-1	Plenum, HX Pack
2215632-2	Plenum, HX Pack
2222601-40	Flight Data Acquisition Unit
22260A030201	Control Unit, Pressuration
22-2656 010-0300	RFI FRONT PANEL PCB REV. 01
22495-000-01	Actuator, NLG Unlock
226114-3	Fuel Boost Pump
22760-000-00	Harness Downlock
22765-000-00	Harness Detecting MLG
227CC02AY00	Contactors
22910-000-01	Harness Assy
23048-004	Starter Generator 200 ADC
23048-004M	Starter Generator 200 ADC
23048-004T	Starter Generator 200 ADC
23048-004TLM	Starter Generator
23048-004TM	Starter Generator 200 ADC
23048-016	Starter Generator 250 ADC
2307-04-1	Indicator Fuel Quantity
23088-002	Starter Generator 300 ADC
23088-002A	Starter Generator 300 ADC
23088-008	Starter Generator 300 ADC
230GC02Y02	DC Junction Box
230GC02Y03	DC Heart
230GC02Y04	DC Junction Box
23111282	MLG Air Bottle
231335-1	Pilot Valve
2313M-227-2	Motor Converter
23180-000-02	Electronic Control Unit
2322H000-005	Selector Valve
23285-000-00	Harness Assy, NLG
23285-000-1	NLG Harness
233145	Valve Assy
23415-000-1	NLG Harness
2381H000-001	Temperature Switch Hydr
23932-032	Indicator Altimeter Type 570
23932-411	Indicator Altimeter Type 570
24040REVB	Brake
241-247-012-005	EVMU
24125-000-00	Cylinder Actuating
2432-11	Generator Control Unit
2438	AC-Generator Control Unit

PARTNUMBER	DESCRIPTION
24929-412	Altimeter, Encoding
251N3182-11	RUDDER CONTROL P.C.U
251N3182-8	Tube Assy
2524.001.25-4131	Recline Release Motor
2524.001.89-52	Controller Assy
2524054-11	Fuel Injector
2583462	ECA
2585703	Amplifier Slaving
2586333-1	Directional Gyro
2586488-1	Gyro Compass Amplifier
2586546-901	Simulator Magnetic
2587193-43	Gyro Directional (C-14A)
2587794	Flux Valve
2588302-1	Directional Gyro
2588302-3	Gyro Directional
2589124-902	M.R Gyro
2589419-901	Valve, Flux
2590623-908	Roll Computer
25910-7	Tank Fuel Ejector
25910-8	Fuel Ejector
2592920-044	Radial Deviation Indicator
2593191-804	Indicator, Radio Magentic
2593379-001	Dual Remote Compensator
2593379-1	Compensator, Q, Targe
2593379-2	Compensator
2593996-333	Gyro Three Axis
2593996-444	Gyro, 3-Axis
2594484	Valve Flux
2594586-912	Attitude Heading Sensing Unit
2594625-903	VOR DME RMI
26006881-301	Kit DC Blower
260-421-1	Brake Housing 419-210
2610-07-1	Digital Clock
261500123-0700	AHRU
26345-1	Divider Fuel Flow
26360-1	Flow Divider
263BA101-2	Battery Assy
2-690029-18	Actuator
270-2196-010	Airspeed Sensor
270-2424-010	Indicator
270-2436-080	Control Unit ATC 613L-3
2704506-2	Direct Current Motor
2704554-2	APU Starter Motor
27600-8	Fan Recirculating
276-5328-001	Panel
2789362-1	Switching Module
2-792-02	Battery Charger
28-0-0500E	Test Set Anti Icing Duct Leakage
28007-204	Altimeter Encoding
2808-1	Starter Motor
2808-2	Starter Motor
285A1780-10	IHC Blackplane PWA
285T1104-17	PCB
28B263-13A	Generator
28B263-13B	AC Generator
28B58-9B	Generator AC 40 KVA
28E99-7	Oil Cooler

PARTNUMBER	DESCRIPTION
28E99-8	Cooler Oil
28VS200Y4B2	Rectifier
28VS200Y-4B-2	Rectifier
28VS200Y4DH	Transformer Rectifier Unit
29-071-01	Panel, Mode Select A/T TAT/EPR
291-21	Navigation Light
291-31	Light, Navigation (LH-RED)
292-13	Strobe Light
292-22	Strobe Power Supply
292-23	Strobe Power Supply
292-25	Power Supply
2950004-201	Actuator
2950004-203	Actuator
2LA004186-00	Light Tail
2LA004626-05	Flightcrew Reading Light
2LA005163-30	Light Reading Flight Crew
2LA005938-30	Att Call Switch Assy
2LA006612-00	Service Unit Passenger (RH)
2LA006672-00	Light Pedestal
2LA007723-00	Service Unit Passenger (LH)
2LA007723-20	Service Unit Passenger (LH)
2LA007723-40	Service Unit Passenger (LH)
2LA007724-00	Service Unit Passenger (RH)
2LA007724-01	Service Unit Passenger (RH)
2LA007724-21	Service Unit Passenger (RH)
2LA007724-40	Service Unit Passenger (RH)
30005-0000-19	Conditioner Torque Signal
30005-0000-24	Conditioner Torque Signal
30005-0000-25	Conditioner Torque Signal
30005-0000-26	Conditioner Torque Signal
30005-0000-28	Conditioner Torque Signal
30005-0000-31	Conditioner Torque Signal
30005-0000-34	Conditioner Torque Signal
30005-0000-35	Conditioner Torque Signal
30005-0000-36	Conditioner Torque Signal
30005-0000-37	Conditioner Torque Signal
30005-0000-40	Conditioner Torque Signal
30005-0000-44	Conditioner Torque Signal
30005-0000-45	Conditioner Torque Signal
30005-0000-46	Conditioner Torque Signal
30005-0000-47	Conditioner Torque Signal
30005-0000-48	Conditioner Torque Signal
30005-0000-49	Conditioner Torque Signal
30005-0000-50	Conditioner Torque Signal
30005-0000-51	Conditioner Torque Signal
30005-0000-52	Conditioner Torque Signal
30005-0000-53	Conditioner Torque Signal
30005-0000-54	Conditioner Torque Signal
30005-0000-55	Conditioner Torque Signal
30005-0000-56	Conditioner Torque Signal
30005-0000-57	Conditioner Torque Signal
30007-0000-03	Fuel Imbalance Unit
3001-01-111	Accelerometer
30030-2	Alternator
30042-0000-0401	Control Unit Fuel
30042-0000-0402	Control Unit Fuel Level
30042-0000-0501	Control Level Sensing

PARTNUMBER	DESCRIPTION
30048-0000-07	Control Unit Autofeather
30048-0000-09	Control Unit Autofeather
30048-0000-10	Control Unit Autofeather
30048-0000-11	Control Unit Autofeather
30048-0000-12	Control Unit Autofeather
30048-0000-13	Control Unit Autofeather
30048-0000-14	Control Unit Autofeather
30048-0000-17	Control Unit Autofeather
30048-0000-18	Control Unit Autofeather
30048-0000-20	Control Unit Autofeather
30048-0000-21	Control Unit Autofeather
30048-0000-22	Control Unit Autofeather
30048-0000-28	Control Unit Autofeather
30048-0000-31	Control Unit Autofeather
30048-0000-37	Control unit Autofeather
30048-0000-41	Control Unit Autofeather
30048-0000-42	Control Unit Autofeather
30048-0000-48	Control Unit Autofeather
30048-0000-68	Control Unit Autofeather
30-0491-5	Port Wing Position Light
30-0491-6	Wing Position Light
30-0593-1	Light, Emergency
30071-0404	Fuel Quantity Processor
30071-0505	Processor Volume 1
30-0837-5	Light Strobe Anti-Collision
30-0906-104	Strobe Light RH
30-0906-105	Strobe light LH
30-0909-1	Light Strobe Tail
30-0909-201	Light Strobe Tail
30092-01	Control Unit Fuel Preselect (B747-100/200/300)
30100022-3	Fire Extinguisher, Lav
30100043	Bottle APU Fire Extinguisher
301-1180	Power Supply Light Emergency
301-1180A	Power Supply Light Emergency
301-1185A	Power Supply Light Emergency
30114-04	Fuel Management Controller
30114-05	Fuel Management Controller
30114-06	Fuel Management Controller
30115-01-PT1	Panel Cockpit Fuel
30115-02	Panel Cockpit Fuel NH90
30115-03	Panel Cockpit Fuel NH90
30115-04	Panel Cockpit Fuel NH90
30115-05	Panel Cockpit Fuel NH90
30115-06	Panel Cockpit Fuel NH90
30116-02	External Fuel Panel NH90
30116-03	EXTERNAL FUEL PANEL NH90
30128-01	Fuel Quantity Processor
30128-03	Processor Unit Fuel Quantity
30136-0106	Transmitter Qty Water
30-1401-3	Strobe Light
30144-03	Conditioner Torque Signal
30-1564-3	Lamp holder Assy
30-1951-1	Light Anti-Collision
301EDP1-4	Engine Display Unit
30200001	Fire Extinguisher
30-2022-2	Light, Navigation
30211-0102	Barrier Control Box

PARTNUMBER	DESCRIPTION
3022016-000	Valve Brake System
30-231-3	Smoke Detector
30-231-43	Smoke Detector
30-231-9	Smoke Detector
30244-0201	Transmitter
30-2610-1	Light Anti Collision White
30-2623-3	Light, Anti Collision, Red
30283-0101	Protector Hot Short
30283-0201	Protector hot short
303-0250-3	Door Lock Warning Box
30-326ET-1	Control Amplifier
3033509	Probe, Pulse
3033515	Probe
3033960	Flow Divider
3037603	Sensor
3038580	RGB Reduction Gear Box PW119
3039242	Probe, Pulse Pick-Up
304-00006	Pressure Gauge
30400010	Fire Extinguisher
30402103	Fire Extinguisher
30402901	Fire Extinguisher
30402901-3	Container, Fire Extinguisher
3045672	Adapter Assy, Fuel Manifold
3045776-01	Fuel Nozzle
3045781-01SET	Fuel Nozzle Set
307997-1	Sensor Press
30852	Non Return Valve
30H673	Extinguisher, Fire, Portable
30VR1107	Valve, Flap Control
30ZF108	Actuator, Flap
31000010	Fire Extinguisher
31007B1	Switch, Overspeed Warning
3102473-1	Fuel Manifold, Primary
3102474-1	Fuel Manifold, Secondary
3102476-5	Signal Conditioner Torque
31101C	Directional Gyro
3114897-01	Wiring Harness
3116270-05	Wiring Harness Elec
3116942-01	Sensor, Torque
3117949-04	Flow Divider and Dump Valve
3118512-01	Flow Divider and Dump Valve
3118512-01A	Flow Divider and Dump Valve
3118642-01	Valve Bleed Servo
3119894-01	Fuel Heater
3121-01	Power Supply Light Emergency
3122402-05	Harness - Propeller
3122413-07	Exciter Ignition (CH92043-2)
31230-1127	Vert, Velocity Indicator
3124413-08	Ignition Exciter
3137LB63C	Indicator Radio Magnetic 3137
3137L-B6-3C	Indicator Radio Magnetic 3137
3137L-B-6-3-C	Indicator Radio Magnetic 3137
31400-117	Indicator Altimeter
3-1531-1	Nose Wheel Assy
315A1800-6	Actuator Assy-Non
315A1800-7	Actuator
31708-001A	Generator AC

PARTNUMBER	DESCRIPTION
318-01040	Oil Pressure Transmitter
318200-1003	Pump
32005-007	Tachometer
3214442-4	Valve Regulator
3214-54-10	Power Supply Emergency
3214560-2	HP Valve
3214-73	Supply Emergency Power
321502-4-1	Valve Bleed Air Divider
3215KGB01	Sensor N1 Speed
321858-3-1	Valve Assy
3224812-2	Valve, Bleed Anti-Icing
32-2684-004	Valve, Air Shutoff
3244853-18	MFCU
3244855-16	MFC
32451-1	Solenoid
3250-81	Ballast
3253-10	Ballast Unit
32700004-1	Engine Fire Bottle
32700020	Fire Extinguisher
3274-10	Red Warning Panel
328-0013	Panel Ice / Fuel / Hydro
328-0021	Panel, APU AC/DC
328-0034	Panel Forward Combined (15VE)
328-0035	Panel Forward Combined (15VE)
328-0070	Panel Oxygen/ECS
328-0074	Panel Oxygen/ECS
328-0080	Panel Trim Control
328-0100	Panel Flight Attendant
328-1034	Panel Forward Combined (15VE)
328-1035	Panel Forward Combined (15VE)
3282556-2	Stop Mechanism VBV
328-3035	Panel Forward Combined (15VE)
328-3074	Panel Oxygen/ECS
3285-10	Control Unit, Windscreen Heat
3285-50	Windscreen Heat Control Unit
3289630-2	Valve
3291432-1	Control Valve
3296-40	Dim Box
33000027-1	Fire Extinguisher
330GA01Y01	AC Junction Box
33100016-2	Bottle, Fire Extinguisher
332A31-2005-01	Blade Sleeve
332A35-0002-02	Gearbox, Intermediate
332A64-1620-06	Power Unit Lighting
3360	Pressure Valve Dump Relief
33600042-1	Bottle, Fire Extinguisher
3367-10AMENDTB	Ballast Inverter
33700002	Engine fire bottle
33900004	Fire Extinguisher
33934-919	Altimeter
3400-22-10	Battery Emergency Light Supply Unit
340760	Detecteur Regime
341W5817-501	Wire Harness Assy
3425-22	Vessel-Heater Assy, Warm Water
34528H011-25	Light Anticollision
3459-A	Sensing element
34600017	Fire Extinguisher

PARTNUMBER	DESCRIPTION
34600049-1	Fire Extinguisher
35009-20	Control Unit
35-0A2-3008-314	Computer Crew Alert
35-0B5-652-313	Card CPU
350E053020909	Flight Warning Computer
350E53020606	Flight Warning Computer
35-0L0-1001-04	ECAM Control Panel
351-38507-002	Control unit-Advisory
3553AAAYAACXBD	Oxygen Cylinder Assembly
35-5M0-113-1000	Smoke Detector
35-5M0-319-0001	Tachometer Driving Tool
35-5M0-319-2001	Tachometer Driving Tool
35-5M0-321-1000	Check Door Tool
35-5M0-321-2000	Check Doors Tool
3567758-6503	Transmitter, Torque Pressure
3571212-3005	Indicator Pressure Hydraulic
3571260-7001	Indicator Tacho
35890-AF-M	Indicator, Airspeed
3591AB57	Crew O2 Mask
35M5M0-113-0000	Test Set Smoke Detector
35M5M0-113-1000	Smoke Detector
360-00449-100	Control Unit FDEP
3603281-6	Exciter Ignition
3604524-47	Cumbustor
3605-8	Lift Computer
3605812-17	Starter
361-012-001	Test Set Fuel Quantity
361-016-001	Test Set Fuel Quantity
3614009-4201	Transponder ATC
3614013-4301	ADF RECEIVER
3614019-4401	Transceiver DME
3614331-1005	NC 104B Nav Concentrator
3614335-1012	Generator
3614475-8601	Transceiver Radar RS 861A
3614477-8602	Indicator radar IN 862A
3618B000	Valve,Shut-off
362GC02Y01	Distribution Box
37-16	Ballast Unit
37-17	Ballast Unit
37-17-2	Ballast Unit
37480-20	Rate of Climb Indicator
37500-0841	Altimeter
3757183-5	CADC
3800498-3	APU GTCP 36-150DD
3810040-104	Reservoir Assembly
38222-350	Directional Gyro
3830061-103	Accumulator
383093-019	Indicator Fuel Quantity Repeater
3876141-2	Solenoid, Valve
388250017	FCU APU
3882730-9	Fuel Control unit
3886188-2	Actuator
38E63-12B	Valve Distributor
38E63-12C	Valve Distributor
38E63-3C	Valve, Distributor
38E85-2B	Pressure Regulator Valve
38E96-2E	Valve, Regulator and Relief

PARTNUMBER	DESCRIPTION
390600-1007	Elevator PCU
390600-1009	Elevator PCU
39-075	Valve Anti Skid
3907B000	Valve Non-Return
391001-302	Tank Unit Fuel
391001-304	Tank Unit Fuel
391002-248	Tank Unit Fuel
391002-249	Tank Unit Fuel
391002-250	Tank Unit Fuel
391002-254	Tank Unit Fuel
391041-023	Tank Unit Fuel Compensator
391041-027	Tank Unit Fuel Compensator
391046-197	Tank Unit Fuel
391046-199	Tank Unit Fuel
391046-483	Tank Unit Fuel
391046-484	Tank Unit Fuel
391057-188	Tank Unit Fuel
391057-289	Transmitter, Liquid Qty
391063-04003M	Tank Unit
391073-01751	Tank Unit Fuel
391075-04750	Tank Unit Fuel
391088-001	Tank Unit Fuel F28
391088-003	Tank Unit Fuel DHC6
391088-004	Tank Unit Fuel DHC6
391095-03018	Tank Unit Fuel
392716-1-1	Valve, Shut Off
393004-01884	Indicator Fuel Quantity S61
393004-060	Indicator Fuel Quantity DHC6
393004-061	Indicator Fuel Quantity DHC6
393008-040	Indicator Fuel Quantity Bell 212
393008-053	Indicator Fuel Quantity Master
393026-03335	Indicator Fuel Quantity
393026-037	Indicator Fuel Quantity
393026-095	Indicator Fuel Quantity
393084-22825	Indicator Fuel Quantity
393085-43708	Indicator Fuel Quantity
39-353	Valve Anti Skid
396196-13	Valve Control Flow
399400-1013	Pitch Trim Actuator
3D1472-11	Timer De-Icer
3D1549-02A3	Shuttle Valve
3D2353-61	Control Valve
3D-2353-61	Control Valve
3D2353-64	Valve Control
3D3556-01	Valve Ejector Flow Control
3D3557-01	Pressure Switch
3D3573-02	Pressure Relief Valve
3E1150-10	Timer
3E1964-1	Timer
3E1964-3	Timer De-Icer
3E2459-1	Controller Temperature Engine
3E2533-5	Heater
400-0052-025	VHF Transmitter
400-014525-00	VHF Transmitter
40002-0000-04	Torque Sensor
40006	Panel, Refuelling
40006-0000-05	Sensor Fan Speed N1

PARTNUMBER	DESCRIPTION
40006MODA	Sig Proc Refuelling Panel
4000831-0105	Transceiver Radar (RT1401B)
4000833-0201	Radar Indicator
4000966-0101	Transceiver Radar (RT1301A)
4001597-2304	Interface Unit
4001670-2513	Indicator Radar IN-2025B
4001670-2515	Indicator Radar IN-2025B
4001973-0151	Transceiver Radar Search and Rescue (RT1501A)
400201	Clock, Panel
400202	Aircraft Clock
4005842	Bracket Servo
4006452	Tank Unit Hydraulic Oil
4006719-906	Servo Drive SM200
4008519-915	Computer Autopilot SP-200
4012373-817	Actuator Linear
40-1300	Compass
4015373-704	Servo Drive Duplex
4015373-706	Servo Drive
4016341-905	Indicator Altitude
4016341-906	Altimeter
4018369-905	Computer, Flight Director
4018639-924	Controller, Autopilot
4019501	Pump Motor
40195-01	Pump Motor
4020531-130	Gyro Horizon
4020936-903	3-Axis Gyro Control
4020Q10-2	Air Pressure Unit
4025008-918	Helipilot Computer
4029377-914	Computer, Autopilot
40-302-3	Total Air Temp Indicator
4031813	PC Board
4031813-901	PC Board
4034100-901	Air Data Computer
4034559-908	Distance Bearing Indicator
4036-D	Probe Oil Temperature
4038170-905	CDU FMC
4039893-903	Indicator, Vertical Speed
4043912-902	CDU
4043912-903	CDU
4051600-913	Flight Control Computer
4051600-914	Flight Control Computer
4052502-953	Computer, Flight Management
4052510-978	AFMC
4052854-1011	AFMC Mass Memory Card
4061100-901	Air Date Comp
4061400-904	Transponder
4066010-904	TCAS Computer
4066010-910	Computer, TCAS
4066300-911	Generator
4067241-860	Indicator Vertical Speed
4067487-901	Pressure Transducer Module
4067877-903	CCA Programmed Memory
4067B000-003	Valve, Pressure
4067B000-004	Valve, Pressure Shut Off
4067B000-005	Main Assembly Valve, Pressure
4068B000	Valve, Flow Control and Shut Off
4068B000-003	Main Assembly

PARTNUMBER	DESCRIPTION
4072862	Landing Light
40800-2050	Hydraulic accumulator
40-817	Transducer Anti Skid
4084042-911	Yaw Damper Coupler
409SUE3-2	EPSI Electronic Power Syst Inst
40E18-3	Shut Off Valve
4100362-1	Motor Hydraulic PDU
4100-849049	Pump, DC Standby
4100S005-04	Distributing Valve
4100S018-06	Timer and Monitor Unit
4100S018-07	Timer and Monitor Unit
4100S019-07	Timer and Monitor Unit
4100S019-08	Probe Ice Detector
4100S020-02	anti-ice controller
412-001-300-105	Bellcrank Assy
412-001-301-101	Bellcrank Assy
412-010-401-107	HUB AND SLEEVE ASSY
412-010-402-111	Swashplate Assy
412-010-405-109	Drive Link
412-010-405-111	Drive Link Assy
412-040-002-109	Transmission Assy
412-040-123-101	Quill Assy
412-040-366-105	Mast Assembly
412-075-008-111	Indicator, Dual Torque
412-075-010-109	Triple Tacho Ind
4120T14P02	Accelerometer
4122-006005	Pump, Feather Aux
4122-006009	Pump Aux.
412-375-001-105	Indicator Fuel Quantity Dual
412-375-007-107	Triple Torque Indicator
413-00198-100	Link Assy, Force, Yaw
4133801011	Rotating Mechanism
414470	Pump Hydraulic
416-0001-9	Coffee Maker
416-00308-001	Arinc Synchro Converter
416-0201-11	Rail Assy Coffee Maker
418-00014	Fuel Pressure Transmitter
418-00084	Transmitter Oil Pressure
418-00452-105	A/P Comp.
418-00453-102	Control Unit, UCC PA 155
418-00475-550	Module Air Data
418-01081	Transmitter
418-02064	Transmitter Torque Pressure
419-00320-652	Computer FDC 85
419-00334-350	Boite de Commande
4200	Autocal AC Standard
420-00332-430	AHRS
420-00332-501	AHRS Unit
420-00332-700	AHRU
420088	Harness
42011	Pump Hydraulic
4205-002-000	Timer De-Icer
4215-01	Fuel Quantity Trim Unit
4215-02	Fuel Quantity Trim Unit
4217212	Retractable Light
4221T100-3	Motor Drive
42-307-1	Anti skid unit

PARTNUMBER	DESCRIPTION
423GC01Y02	DC Generator Unit
42-651-01	Control Unit, Anti Skid
42-741	Control Box
42-86V6	Horizon Gyro
42A12-1	Ultra Sonic Testset
42D107A1	Oil Pressure
430101	PCCU Power Control Unit
430153	Generator Stator
430201	Stator
4305890010	Interface Unit Wheel
430988	Cable Ignition PW2000 / F117-PW-100
4315542	Retractable Landing Light
4327-4	Disconnect Unit
4328-2	Disconnect Unit
4330	Stick Shaker
4337122	Motor Converter Assy
4337138	Motor Converter Assy RH
4349-150-80-10	Indicator Trim Rudder
4350-150-80-10	Indicator Trim Aileron
441TS08Y01	Fire Extinguisher Panel, Eng
44226	Cable Special Purpose F16 PW100/PW200/PW220(E)
4428-150-80-10	Indicator Flap Position
4428-150-80-11	Indicator Flap Position
442SUE2-3	Integrated Display Unit
44302	Exciter, Ignition
44303	Ignition Unit
44376-1	Stator, Generator AC
44525	Exciter Ignition
44694	Lead Ignition High Tension
4472R170	Brake
44A256-2	Switch
44E10-2A	Water Seperator
45-0083-7	Light Landing Retractable
4500873	Control Assy Acceleration
4501120A	Electronic Sequence Unit
4501120B	Electronique Sequence Unit
45-0253-22	Search Light
4503-350-4	Electrical Master Box
45040-1	Stator
45107	Lead Ignition High Tension
45150320	Sensor Angle of Attack
453-1000	ELT
453-5000-366	Elt C406-2
453612-06	Circuit Card Assembly
453616-02	Display Driver Board
454-00162-000	Gyro Vertical (Type 76-2)
455002-03	Board TX/RX
457400KA1901	VSI/TCAS Indicator
457400TC0812	TCAS
45E04-1	SENSING ELEMENT
45E04-2	Valve
4-6000H882-00	Drain Mast
46038	Rotor-EEC alternator
460800-33-31	Computer, AHRU
46470	Exciter Ignition F16
466090	Fire Extinguishers
472073-2	Fire Extinguisher

PARTNUMBER	DESCRIPTION
472088-1	Fire Extinguisher
472090-003	Test Set Fuel Quantity AC
472090-007	Test Set Fuel Quantity AC
472190	Housing Transmitter Tachometer
472420-2	Fire Extinguisher
472465-021	Tank Unit Fuel
472465-023	Tank Unit Fuel
472465-026	Tank Unit Fuel
472465-027	Tank Unit Fuel
472465-030	Tank Unit Fuel
472465-031	Tank Unit Fuel
472465-032	Tank Unit Fuel
472740	Indicator Fuel Quantity
472741-3	Control Unit Fuel Quantity (A-type)
472742-1	Control Unit Fuel Quantity (B Type)
472854-2	Control Unit Fuel Level Sensing
472887	Indicator Fuel Quantity
473054	Smoke Detector
473203-003	Conditoner Signal
473271	Sensor Fan Speed
473597-14	Smoke Detector
473597-18	Smoke, Detector
473597-19	Smoke Detector
473597-5	Detector, Smoke
47369-1	Stator
473776-3	Fire Extinguisher
47385	PCCU
473957-1	Fire Extinguisher
47418-2	Exciter Ignition F16
47425-4	Stator Generator Ignition F16
48114-1030	Oil Cooler
4812-70	Pump Motor Lavatory
48404-7	Exciter Ignition
48750	Lead Ignition High Tension
48753	Lead Ignition High Tension
48888	Box Interconnection F16 (PW100/PW200/PW220(E))
49380	Probe-Pitot
49397	Cable Special Purpose F16 PW100/PW200/PW220(E)
49402	Cable Special Purpose F16 PW100/PW200/PW220(E)
49543-7	Exciter Ignition
49574	Alternator Rotor
49910	Box Interconnection F16 (PW100/PW200/PW220(E))
4D2037-01	Timer De-Icing
4D2054-01	Timer De-Icing
4D2095-210	Regulator, Pressure
4D2095-220	Regulator, Reliever
4E2947-3	Timer De-Icing
4E3160-1	Drainmast
5000B	Outlet Shaver
500-1-04118-001	Fuel Trim Actuator
500-12Y	ELT
500702-4620	Gasper Fan
5007555	Brake Assy
5007555-3	Brake, Dual Disk
50076-0000-01	Trimmer
50086	Video Projector
5009986B	Fuel Pump

PARTNUMBER	DESCRIPTION
5009986C	Pump, Fuel
501	Monitor Battery Temperature
501-1075-02	Supply Emergency Power (PS-823B)
501-1075-06	Supply Emergency Power (PS-823B/T)
501-1105-04	2" Attitude Indicator AI-804
501-1108-05	Computer Amplifier
501-1108-06	Computer Amplifier
501-1111-02	Yaw Damper
501-1114-02	Gyroscope Displacement
501-1121-01	Vertical Gyro
501-1162-02	Directsyn DN-104B
501-1170-33	Indicator Attitude (AI-904AK/B)
501-1195-01	Indicator Attitude (AI-903W)
501-1197-03	Indicator Attitude Standby (AI-804N)
501-1197-05	Indicator Attitude Standby (AI-804R)
501-1197-20	Indicator Attitude Standby (AI-804BL)
501-1204-01	Vertical Gyro
501-1205-02	Static Inverter SI-1000()
501-1228-03	Power Supply Emergency PS-835C
501-1228-04	Power Supply Emergency PS-835D
501-1258-01	Capstan Assembly
501-1259-04	Actuator Stick Pusher
501-1295-01	Indicator Attitude
501-1326-01	Control Box
501-1330-01	Static Inverter
501-1566-16	Attitude Indicator, Analog
501-1567-02	Indicator Attitude (ADI-331B)
501-1567-10	Indicator Attitude (ADI-331K)
501-1568-10	Indicator Attitude AI-330K
501-1568-34	Indicator Attitude AI-330AL
501-1568-38	Indicator Attitude AI-330AR
501-1568-47	Indicator Attitude AI-330BA
501-1648-01	Indicator Attitude AI-804BF
501-1657-02	Indicator Attitude ADI-333B
501-1666-01	Static Inverter
501-1712-01	Supply Emergency Power PS-855
501-1712-02	Supply Emergency Power PS-855
501-1712-04	Supply Emergency Power PS-855
501-1724-01	Static Inverter SI-3003C
501-1742-01	ATTITUDE INDICATOR
501-1753-04	Attitude Indicator
501-1753-14	Indicator, Standby Horizon
501-1770-03	Capstan, Stick Pusher
501-1820-02	2" Attitude Indicator
501-1845-01	Attitude Indicator
501-1849-01	Indicator Attitude Standby (AI-804DC)
50130-1	AFT Entry Door Snubber Assy
50150-0413	Harness FQI
50150-1	Snubber Assy Pass Door
50196-13	Mech-Spd Brake
50234-1	Transmitter, Hydraulic
50309-008	Bus Bar Protection Unit
503-16-GPS	Crash Position Indicator
503321-401-2251	Seat Belt Black
503321-401-2847	F/A Seat Harness Grey
5035P2-P39	Encoding Altimeter
5035P2-P39P.148	Encoding Altimeter

PARTNUMBER	DESCRIPTION
5035P2-P42	Altimeter, Encoding
5039	Vertical Gyroscope
504-0017-913	Attitude Gyro (Model 510-17A)
504-0017-917	Attitude Indicator
504-0028-901	Attitude gyro
504-0110-902	Indicator Attitude (AIM 1100)
504-0111-908	Indicator Attitude (AIM 1100)
504-0121-901	Indicator Attitude Standby
504-0121-906	Indicator Attitude Standby
504-0122-906	Indicator Attitude Standby
504109-401-2251	Restraint Lap
505-0031-904	Directional Gyro
5059	Valve
5060-1-2	Remote Electronics Unit
5061-1-1	Control Panel Audio
5082-1-2	PA Amplifier
509-0001-904	Indicator Turn & Slip
51210	Altimeter Encoding
5145-1-47	Audio Control Panel
51509-002R	Control, DC
51525-014A	Control Unit Generator (DC)
51539-002N	Control Unit
51539-008D	Generator Control Unit DC
51608-003	Generator Control Unit
51653-151	Unit Control Fire Warning
5-2000-07	Gyro Directional
520-3137-304	Indicator Radio Magnetic 3137
520-3137-317	Indicator Radio Magnetic 3137
520-3337-213	Indicator Radio Magnetic 3337
521389	Indicator
522-1135-012	VHF Antenna
522-1837-000	Antenna - ADF Fixed Loop
522-2447-252	Control Unit COM/NAV 313N-2
522-2644-011	Navigation Set
522-2867-000	Speaker Amplifier
522-3241-000	Directional Gyroscope
522-3487-002	Indicator Flight Director
522-3985-001	Vertical Gyro
522486	Indicator aileron trim
522487-1	Indicator Battery Temperature
522-4892-022	Computer Pitch Steering
522-4945-001	Flux Detector
522778	Indicator Power Monitor DC
522808	Indicator Power Monitor AC
522942	Indicator, Flap Position
523281	Indicator Oil Temperature Press Dual
5247-218-80-10	Indicator Dual Fuel Temp
524740	Valve, Duct Relief
525-2150-932	Control Unit
5260-1-1	Audio Remote Unit
5261-1	Panel Audio Control
5283-1-1	Handset/Cradle Interphone
5283-1-6	Handset Cradle
5283-41-3	Handset Interphone
5287-1	Control Unit Attendant #2
5289-1	Control Unit Attendant #1
5299-1	Actuator, Elevator Trim Tab

PARTNUMBER	DESCRIPTION
5301	Actuator, Trim Aileron
5339-3	Oil Pressure Transmitter
53-39-3	Oil Pressure Transmitter
53-40-8	Transmitter Oil Pressure
5346-220-80-10	Indicator Cabin Duct
5348-200-80-10	Indicator Fuel Tank
5361-1-7	Panel Audio Control
5382-1	Amplifier PA
540-0949-5	Valve, Interstage Bleed-Off
540-1037-5	Valve Intercompressor Bleed Off
540200-3	Actuator
5403C000	Temperature Limiter
540538-2-1	Actuator
5406C000	Temperature Controller
5409C000	Sensor Bay Temp
5410C000	Temp Sensor Air Distr Duct
5413C000	Temperature Control Valve
5427-218-80-10	Indicator Temperature Fuel Dual
5427-361-80-10	Indicator Temperature Oil Pressure
545344	Transmitter Tacho
5483-1	Handset Cradle
5500-A1A-BF20B	Oxygen Bottle
5500-A1A-BF23A	Bottle Oxygen Port
5500-A1A-BF25A	Portable Oxygen Bottle
5500-A1U-BF25A	Portable Oxygen Bottle
5500-A1U-F30AN	Cylinder Oxygen Bottle
5500-B1A-BF23A	Oxygen Bottle
5500-B6C-BF25A	Bottle
5500-C1A-BF20B	Portable Oxygen
5500-C1A-BF23A	Bottle Oxygen
5500-C1A-EG23A	Port Oxy Bottle
5574	Latch
5584C000	Switch Over Temp
559-012B	Static Inverter
5600-9C1A-YON	Oxygen Bottle
5618C000-002	Valve Temperature Control
5619-1	Switch, Pressure
5633-711-80-10	Indicator
5636C000-002	Valve Temp Control
5677-705-80-10	Indicator
5677-756-80-10	Torque Indicator
5677C000	Pneum Temp Sensor
5677C000-002	Sensor, Pneumatic, Temp
5678-713-80-10	NP Indicator
568-1-26713-005	Pump, Fuel
570-074-321-009	Amplifier Roll
5700824	Ballscrew - INBD
570347	Pump Hydraulic
571191	Hydraulic Pump
57186-10	Pump Motor Driven Hydraulic
5729C000-003	Environmental, Control Unit
5732C000	Low Limit Control Valve
574-074-101-015	Synchronizer
574-074-101-017	Synchronizer
574-074-101-019	Synchronizer
574-074-101-15	Sync control module, Pirch
574-074-101-17	Synchronizer

PARTNUMBER	DESCRIPTION
574-074-101-19	Sync Control Module, Yaw
574-074-140-3	Control Panel
574-074-150-001	Trim Control Panel
574-074-150-1	Panel Trim AFCS
58057-12	Compass Gyro CG130
58057-82	Gyro, Compass
58057-83	Gyro, Compass
5813701	Motor, Hydraulic
5860010-108	HPT Air Valve
5-89357-34	Windshield Eyebrow RH #4
5913149-5	Chassis, Prim PWR Distr Assy
5934P	Altimeter
5934P-3	Altimeter
5934PD-3	Altimeter
597-0885-001	Switch Unit
597-2086-002	AT 9090F Antenna
597-2094-101	HF 9040F Coupler
597-2109-302	EDU-4010F
5E2372	Drainmast
5E2452	Drainmast
600100-00-500	Timer De-Icing
6004122	Anti Skid Control Box
6004125-2	Control Box Anti Skid
6004272-7	Control Box Anti Skid
6004273-1	Anti Skid Valve
6006543-1	Skid Control Box
600700-00-501	Air Valve
6007047	Transducer Wheel Speed
601-004	Extinguisher, Fire
60121-001-1	Altimeter, Encoding
60-1321-1	Power Supply Light Emergency Exit
60-1755-5	Power Supply
602533-01	FWD Thermocouple Harness
60-3274-5	Power Supply Strobe Light
6033-01-1	Refuelling Box
60-3368-7	Power Supply Strobe Light
60-3844-3	Power Supply Light Emergency Exit
60-4068-1	Power Supply Light Emergency Exit
60-5025-1	Power Supply Emergency
6068T97P12	Fuel Control Unit
610020008	Corrector Motor
61121-04A	Indicator Torque
61163	Engine Fuel S/O Valve
612-1-49780-102	FDAU
61268	Unit Junction
61-3800-1	Battery Assy
6147-6	Actuator
61650-20300-042	Primary Servo
617154-5	Window heat control
617924-3	Controller
622-0555-003	Indicator Radio Magnetic (332C-10)
622-0555-004	Indicator Radio Magnetic (332C-10)
622-0876-001	Receiver NAV VIR-30A
622-0876-011	Receiver NAV VIR-30A
622-0876-201	Receiver NAV VIR-30A
622-0954-002	Antenna Altimeter 437X-1B
622-0965-003	Elevator Servo Trim

PARTNUMBER	DESCRIPTION
622-0965-005	Servo, Trim
622-1036-001	AP Programmer
622-1204-002	Indicator Radio Altimeter 339H-4
622-1204-003	Indicator Radio Altimeter 339H-4
622-1204-004	Indicator Radio Altimeter 339H-4
622-1233-001	Transceiver DME-40
622-1270-001	Transponder ATC (TDR-90)
622-1334-001	Transceiver COM VHF-20B
622-1352-001	Indicator Flight Direction FD-112V
622-1352-002	Indicator Flight Direction FD-112V
622-1522-001	Computer, Autopilot
622-1523-001	Selector, Mode 614E-42
622-1879-001	Transceiver COM VHF-20A
622-2012-011	Indicator DME 339F-12A
622-2080-011	Receiver NAV VIR-351
622-2362-001	Receiver ADF-60A
622-2363-001	Antenne ADF 60A
622-2366-001	Servo, Primary
622-2506-014	Indicator Radio Magnetic RMI-36
622-2506-101	Indicator Radio Magnetic RMI-36
622-2855-001	Transceiver Radio Altimeter ALT55B
622-2883-001	Amplifier PWR-200
622-2884-001	Coupler Antenna AAC-200
622-2921-006	DME Interrogator
622-2923-005	Altitude Preselector
622-3016-001	Servo
622-3201-001	Transceiver Radio Altimeter ALT-50A
622-3594-013	Indicator
622-3670-001	Transceiver TRC451
622-3671-001	Indicator
622-3710-001	ADF Antenna
622-3915-001	Indicator DME IND-40
622-4127-001	VOR/ILS 479S-6A
622-4538-001	Antenna, 437S-1H
622-4540-122	DME Interrogator
622-4545-001	Control Unit CTL-220
622-4550-001	Antenna-Radio Altimeter
622-4565-001	Gyro
622-4938-001	Indicator Radio Magnetic (RMI-30)
622-4938-007	Indicator Radio Magnetic (RMI-30)
622-5139-003	Indicator Attitude Director
622-5337-001	Transceiver TCR-220
622-5734-002	Servo Motor, Primary
622-5797-001	Sensor Air Data
622-5798-008	Flt Control Panel
622-5799-104	Annunciator
622-5812-001	Flux Detector Unit
622-6135-014	Control and Compensation Unit
622-6136-002	Gyro, Directional
622-6137-201	Receiver NAV VIR-32
622-6152-001	Transceiver COM VHF-22A
622-6152-011	Transceiver COM VHF-22A
622-6152-031	Transceiver COM VHF-22A
622-6153-001	Transceiver COM VHF-22B
622-6263-001	Transceiver DME-42
622-6263-003	Transceiver DME-42
622-6376-015	Receiver Radio

PARTNUMBER	DESCRIPTION
622-6471-002	Coupler Antenna AAC-220P
622-6520-001	Control Unit COM CTL-22
622-6520-003	Control Unit COM CTL-22
622-6520-004	Control Unit COM CTL-22
622-6520-007	Control Unit COM CTL-22
622-6520-008	Control Unit COM CTL-22
622-6521-001	Control Unit NAV CTL-32
622-6521-011	Control Unit NAV CTL-32
622-6521-015	Control Unit NAV CTL-32
622-6521-016	Control Unit NAV CTL-32
622-6522-001	Control Unit ADF CTL-62
622-6522-003	Control Unit ADF CTL-62
622-6522-007	Control Unit ADF CTL-62
622-6522-008	Control Unit ADF CTL-62
622-6523-007	Control Unit ATC CTL-92
622-6523-205	Control Unit ATC CTL-92
622-6523-207	Control Unit ATC CTL-92
622-6523-208	Control Unit ATC CTL-92
622-6524-003	Indicator DME IND-42A
622-6524-004	Indicator DME42
622-6557-001	Transceiver HF TCR-230
622-6614-021	Control Unit HF CTL-230
622-6667-001	Amplifier HF PWR230
622-7194-201	RECEIVER,NAV VIR-432
622-7318-001	Indicator DME IND-42C
622-7383-001	ANTENNA, SINGLE ADF ANT-462A
622-7484-421	Display EFIS
622-7580-041	Panel WXP85D
622-7999-013	Display
622-8000-006	Efis Symbol Generator
622-8001-350	Panel Control Efis
622-8047-541	Display MFDU
622-8111-006	HF-9010 Remote Control
622-8112-003	HF 9030 Receiver transmitter
622-8114-002	HF Coupler
622-8973-001	Antenna TCAS
622-9210-003	Transponder TDR-94D
622-9210-007	Transponder,TDR-94D
622-9436-101	Generator Symbol EFIS
622-9462-024	Preselector Altitude
622-9614-103	Control Unit TCAS CTL-92T
622-9614-113	Control Unit TCAS CTL-92T
622-9681-001	Electric Flight Display
622-9682-002	DPU-84 Display Processor Unit
622-9738-020	ILS Receiver
624992-2	Controller Heat Window
624992-3	Controller Heat Window
627248-2	Pneumatic Controller
638005001	Pump, Feathering
638005003	Feathering Pump
638005200-1	Pump
64131-760-1	Altimeter Counter Pointer
642-5861-501	Rail Assy
64279-508-2	Transmitter Oil Pressure
64550-029-1	Tachometer Generator
64724-001-2	Transmitter Pitch
64757-101-2	Fuel Level Transmitter

PARTNUMBER	DESCRIPTION
64809-431-1	Indicator, Oil Pressure MGB
64905-006-1	Indicator Position
65-0075-9	Master Caution Switch
650077-6	Lead Ignition
650077-7	Lead Ignition
650-1141-932	Indicator HSI 651
65-20-001	Control Panel
65-20-002	FWD Attendant Panel
65-2346-5	Snubber Assy
65-44561-15	Flt. Spoiler Actuator
65-44761-17	Control Unit Assy
65-44761-21	Power Control Unit
65-44761-22	Power Control Unit
65-44771-4	MLG Damper Assy
65-44991-3	Valve, Isolation
65-46108-17	Beam
65-49970-25	Actuator Assy
65-52211-1	Tube
65-52801-31	APU Control Unit Assy
65-52804-79	Audio Unit
65-52810-57	Accessory Unit, Air Conditioning
6562	Valve
65-74038-47	Mechanism Aileron Trim LH Control
65807-000-1	Clock
65B60034-15	Actuator, Cargo System
65C26343-4	Arm, Carriage
65C33684-11	Counter Balance Assy
65C35322-1	VHF/COMM Ctrl Panel
65C38059-13	Actuator
6608M11A	Vibration Monitor
66173-04	Hydraulic Pump
66503-8061-464	Fuel Control Unit
666000143	PEC
6670M2230	Microtac Digital
668202005	Electronic Controller Unit
66946	Lead, Ignition
66WAN200-10	Pump, axial pistons
6700-300-80-10	Indicator Power Monitor AC
6700-400-80-10	Indicator Power Monitor DC
6700-400-80-11	Indicator Power Monitor DC
67-2905-001	Eng Bleed VLV
67-2906-002	Valve Anti Icing
6742	Generator Air Data
67H0540	Test Set
6800-100-80-10	Indicator Temperature Battery Monitor
682003008	RAT Control Unit
686-4027-400	Control Landing Gear
686-4035-500	PCB Auxiliary Warning
6873465	Speed Sensor
688-100-1	Baggage Fire Indicator
693335	Pump
69-37307-300	Engine & APU Fire
697079003	Brush Block Q400
69-73713-12	Selector Module
69-78214-3	Aural warn mod
69-78214-4	Aural Warn Mod
698430-1	Oil Pressure Switch

PARTNUMBER	DESCRIPTION
698430-2	Oil Pressure Switch
7000700-940	Computer Air Data
7000700-942	Air Data Computer
7000700-959	Air Data Computer
7000700-977	Computer, Air Data
70-0112-1	Flasher, Position Light, Aircr.
7001182-913	Indicator Attitude Director
700-1364-001	Monitor
700-1364-002	Monitor
7001840-902	Transceiver, Radio Altimeter RT300
7001840-912	Receiver Transmitter Radio Altimeter RT-300
7001840-913	Receiver Transmitter Radio Altimeter RT-300
7001840-918	Receiver Transmitter Radio Altimeter RT-300
7001840-922	Receiver Transmitter Radio Altimeter RT-300
7001840-932	Receiver Transmitter Radio Altimeter
700-2200-001	Video Distribution Unit
7002260-722	Servo Drive Assy
7002260-723	Actuator Servo
7002638-907	Indicator
70-0276-1	Current Sensor
7002860-909	Indicator Airspeed
7003110-901	Display, Electronic
7003110-902	Electronic Display ED-800
7003110-912	Display EFIS
7003137-902	Circuit Card Assembly
7003360-941	Computer, AHRS
7003360-946	Computer AHRS
7003360-947	AHRU
7003400-802	Generator, Symbol
7003652-602	Advisory Display Unit
7003652-611	Advisory Display
7003974-730	Computer Flight Guidance
7003975-901	Flight Guidance Controller
7004544-314	Symbol, Generator
7004544-714	Symbol Generator
7004577-903	Control And Display, AL-801
7005819-506	Controller Display EFIS
7005819-813	Display Efis
7005973-912	Controller, Remote instrument
7006921-302	Controller WC-800
7007549-901	Control Display Unit
7007549-906	Control Unit Display CD810
7007700-301	Indicator, Weather Radar
7008470-812	Transceiver, Weather Radar
7008470-822	Weather Radar XCVR WU650
7008470-922	Weather Radar XCVR WU650
7008471-607	Controller, Weather radar
7009750-901	Flight Mode Panel
7009750-903	Flight Mode Panel
7010133	Flux Valve
70-109	Fan Axivane Blower
7013270-934	Radio Management Unit RM855
7013270-936	Radio Management Unit RM855
7013348-913	Data Acquisition Unit DA800
7013348-918	Data Acquisiton Unit DA800
7013348-937	Data Aquisition Unit DA800
7013788-808	Symbol Generator

PARTNUMBER	DESCRIPTION
7014300-902	Display Unit DU-870
7014332-902	Bezel, Controller
7014700-917	Computer, Air Data AZ840
7015327-905	Panel Flight Guidance GP300
701654	Light Strobe Wingtip
7016600-902	Data Loader
7017300-11006	Computer, Integrated Avionics IC800
7017300-11010	Integrated Avionic Computer
7017300-11125	Integrated Avionics Computer
7017300-14006	Computer Integrated Avionics IC800
7017300-14125	Integrated avionic computer
70185-1	Valve, Sequence
7021450-601	Transceiver Radar WU-660
702242	Strobe Light AFT
7023460-801	Display Unit, DU-1080
7023460-803	Display Unit, DU-1080
702504	Light Strobe Wingtip
7025725-932	Multi-Purpose Control & Display
7025725-941	MDCU
7025725-945	Multi Function Display Unit
7026542-1901	Module Assembly Dual NIC with PR
702A10-0092-00	Servo Cylinder Assy
702A10-0092-01	Servo Cilinder Assy
70410-02561-112	Actuator, Pitch Trim
70450-01040-112	Indicator, Vertical Situation
704A46-8140-97	Control Electric Light
704A46851021	Light Anti Collision
705-20	Indicator, Horizon Gyro
705-7V4	Horizon Gyro
708200-3	Lamp Dimmer Switch
710297-6	Cabin Pressure Controller
71-0713-5	PCB
711002-4	Panel Pressure
711002-5	Pressure Control Panel
711003-5	AFT Outflow Valve
71-200-13	Steering Actuator
712201-1	Fire Pull Switch
7123-19973-03AB	Panel
71404-1	Brake Metering Valve
716-662-1	Indicator Fuel Totalizer (Kg)
716-663-1	Indicator Fuel Quantity
716-664-1	Indicator Fuel Quantity
717324A	Cap
717801-1	Landing Gear Lever
720737-5	Valve, Safety Relief
731840	Power unit standby
7318C000	Valve, Control Temperature
732-13650-10	Power Unit
732-13650-15	Power Unit Assy
732-16870-03	Apu air inlet door actuator
734181D	Flap Actuator
734374D	Screwjack Actuator
73910193-001	Clock Digital 811A/B
739600-113	Valve Fuel Assy Plug In
740508	IDG
740520	APU Generator
74-20	Hand Fire Extinguisher Halon 1211

PARTNUMBER	DESCRIPTION
743-0238-001	Video Cassette Player
743-0293-001	Video Reproducer Unit
743-0304-001	8 mm Video player
748-465-5	Indicator Fuel Quantity
748-722	Fuel Qty Indicator
749A0000-02	Plenum LH
75-0434-1	Panel Assy Master Warning
75-0434-5	Panel Assy Master Warning
7510100-613	NAV Unit
7510100-631	Integrated NAV Unit
7510100-831	Navigation Unit
7510280-901	Board Printed Circuit Assy
7510700-663	Integrated Com Unit
7510700-862	Integrated Communication Unit
7510700-864	Integrated Com Unit RCZ-833C
75-108-1	Tank Unit Fuel
75-108-2	Tank Unit Fuel
7511001-912	Control Unit Audio
7513000-836	Clearance Delivery Controller Head
7514081-903	TCAS Antenna / Adapter
7514081-911	TCAS Antenna
7517900-10003	TCAS Computer
7517900-10004	Computer, TCAS 2000
751A0000-07	Flow Valve Control
7522-1-9	Panel
754-1-32148-013	Airflow Control Unit
754-1-32156-003	Actuator
7551901	Filter Assembly
758355-2	Transmitter Fuel Gauge
7588B000	Valve, Solenoid
76-100-22	Indicator, EGT
762185H	Generator Control Unit
763-050-1	Probe, Thermostatic
763810-1	Cabin Press Control
763810-2	Cabin Pressure Control
767819-4	Fuel Control Assy
767820-3	Fuel Control Assy
76900-01808-103	Gyroscope Rate
770037	Fuel Pump
774934-1	Timer, De-Icing
777-1061-001	Elevator Servo
777-1328-001	Coupler HF Antenna
777-1492-005	Receiver, ADF
778683-2	Heat Exchanger
778686-3	Valve, Pressure Shutoff
778686-4	Valve
778695-3	Pressure Reg. and Shutoff
778697-1	Valve, Temperature Trim
778727-10	Valve-Dual Temperature Control
778727-7	Valve, Pack Control
778728-6	Fan
78014	Flow Control Servo Valve
78-10066BP	Timer, De-Icer
78142	Valve, Servo
782100-4	Switch
7824792	Ball Screw Jack
782490-47	Control Unit, Prop (with TQ Motor)

PARTNUMBER	DESCRIPTION
782490-51	Propeller Control Unit
782490A51	Control, Popeller
7825E	Densitometer
782689-3	Brush Block
782689-5	Brush Block
782689-6	Brush Block
782790-15	Air Cycle Machine
784914-1	Bulk Head and ring
785084-1-005	Synchrophaser
785087-6-013	Synchrophaser
785841-1	Temperature Controller
786391-14	FCU
786391-6	HMU
786392-15	Fuel Control Unit
78-8060-5960-2	Display Processor
789842-6-008	EEC118-11
789842-6-009	EEC
789843-5-010	Electronic Control Unit
790180-3	Actuator Prop.
790425A6	Starter
791809-4-004	EEC132-10
792-6140-001	Coupler Antenna
792-6348-003	Autopilot Computer
792-6357-008	Attitude Indicator
792-6694-001	Vertical Gyro Remote
792-6780-001	Servo
792-6781-001	Servo
793T100-7	Drive Unit Emergency
796-559-2	Fuel control panel
796-809-6A	Cadensicon
796-942-2	Refueling Control Panel
798213-2-007	EEC
798213-3-007	EEC
7G811	Switch, Pressure Hydraulic
7SC0284	Rudder Synchro Transmitter
80-0610-3-55	Computer Flight Warning
801307-00	Oxygen Cylinder
802488-1-003	Control, A/F
803163-02	Regulator Transducer Assy
803668-01	Oxygen Bottle
8047/10DH	Indicator Altimeter
805-11500-001	Stormscope
80-5145-9-3	Display, EGPWS
80-5145-9-4	EGPWS Display
805813-1-005	ECU
806000-31	Fire Extinguisher
8-060-02	Proximity Sensor Card
8061-464	Fuel Control Unit
8061-633	Fuel Metering Unit
806371-111	Oxygen Bottle
806371-121	Oxygen Botle
806371-311	Oxygen Cylinder & Regulator Assembly
808050-4-056	Electric Engine Control
80822-00-0218	Trible Navigation
809371-121	Ox, Bottle
8095261-4210	Panel ATC control
809575-2-004	EEC

PARTNUMBER	DESCRIPTION
810211-2	Temperature Sensor, EBAY
810447-1	Hub, Propeller
810591-1	Bulkhead
810592-1	Spinner Assy
810800-1-003	Electronic Engine control
811099-3	Hydro Mechanical Unit (HMU)
811099-4	Hydromechunit
811099-5	Fuel Control Unit, JFC118-15
811180-4-004	Electronic Engine Control
811180-5-004	Electronic Engine Control
81194	Antenna GPS
811B	Clock Digital 811B
811B-1	Digital Clock 811B-1
81440-42-241M	GPS Receiver
815585-7	Actuator Assy
8160-121	Starter Generator 400 ADC
816331-4-002	Control Propeller Electronic
816604-1	Valve, Pressure Reg & Shutoff
8190026	Pressure Switch
819290-10-001	Circuit Card Assy EEC800-1 Channel A
819290-9-001	Circuit Card Assy EEC800-1 Channel A
819291-10-001	Circuit Card Assy EEC800-1 Channel B
819291-9-001	Circuit Card Assy EEC800-1 Channel B
820154-1-002	EEC
8202-11-4000	Oven Module
820907-1	Switch
820908-3	Switch
820973-4	Switch, Pressure
8210-160	Governor, Overspeed
8210-161	Governor, Overspeed
8210-161C/E-F	Overspeed Governor
8210-286	Pump Overspeed
8210-286A	Pump Hydraulic Overspeed
821166-1	Filter
8213229000	Test Set
822-0021-202	CDU-4100
822-0101-002	HF Transceiver, HF-9031A
822-0400-001	Receiver NAV VIR-33
822-1069-001	Transceiver HF
822-1113-001	Transceiver COM VHF-22C
822-1115-001	VHF Transceiver
822-1120-001	Control Unit COM CTL-22C
822-1120-003	Control Unit VHF/COMM CTL-22C
822-1120-007	Control Unit COM CTL-22C
822-1293-033	TCAS II Processor TTR-921
822-1338-003	Transponder ATC
822-1338-021	Mode S Transponder TPR-901
822-1567-102	Control Panel
822-2176-003	CTL COMM. BK. 5/28,BL/WH CTL22G
8236-3	Actuator
82410126-009	DC Control Panel
82420440-001	Box, Relay Junction No. 3
82425-00-005H	Computer Flight Management
82454104-003	Harness Air Intake
824960-10	Circuit Card Assy Power Supply EEC150-4
824960-25	Circuit Card Assy Power Supply (EEC150-40)
824960-40	Circuit Card Assy Power Supply (EEC150-40)

PARTNUMBER	DESCRIPTION
824960-41	Circuit Card Assy Power Supply (EEC150-40)
824969-10	Circuit Card Assy Processor/Input (EEC150-40)
824969-11	Circuit Card Assy Processor/Input (EEC150-40)
824969-25	Circuit Card Assy Processor/Input (EEC150-40)
824969-40	Circuit Card Assy Processor/Input (EEC150-40)
824969-41	Circuit Card Assy Processor/Input (EEC150-40)
824969-9	Circuit Card Assy Processor/Input (EEC150-40)
824974-25	Circuit Card Input (EEC150-40)
82550086-007	Net Baggage
8260-123	Starter Generator
8271-1	Actuator
82910016-009	Actuator Assy
83000-05604	Window Heat Control
83238825	Safety Chain Controller (SCC)
83311-49930	Exciter Ignition
83423059-021	Panel Altitude Alerter
83461029-007	Panel, Annunciater R/NAV
83910194-001	Clock Digital 811A/B
83920015-005	Shelf Assy Avionics
83SUE/8	Computer Roll
840002-074	Filter
8409	Actuator Elevator Trim
8409-1	Elevator Trim Actuator
8409-2	Pitch Trim Actuator
8409-3	Actuator, Elevator Trim
8410	Actuator Trim Aileron
8410-1	Actuator Trim Aileron
8420B1-301	Monitor LCD
8-425-03	PSCU
8428-2	Actuator , Rudder Limiter
8428-4	Actuator, Rudder Limiter
8432-1	StickPusher
8450B5	Hinge Assy CDDS
849557	Power Unit, Hyd
85000-5	Pressure, Switch
85100-3	Valve Ejector Flow Control
85100-3B	Valve Eject
8519M3	Flap Control Box
853BR	Pitot Head
8563C000	Condenser Water Extractor
8565M1	Transducer (Flap Position)
85816	Pump Fuel Booster
8-586-01	Proximity Switching Unit
8600A	Digital Marker
861555	Pump, Hydraulic Aux
861810-07	Extinguisher, Fire
861A02	Heat Valve Control
861CAB	Vane-Alpha
861CAB-0001	Angle of attack
861CAE1-0001	Angle Of Attack TX
861CAU2	Angle of Attack Transmitter
861EF1	Sensor, AOA
8-700-04	PSEU
8-700-04 MOD A	PSEU Proxi Box
8-700-04 MODB	PSEU Proxi Box
8-700-05	PSEU
8-700-05 MODA	Pseu Box

PARTNUMBER	DESCRIPTION
8700-5	Steering ECU
87-5273	Valve
88000-4102	Clock
8-800-70-029	Power amplifier atva assy
8-821-52-021	Active tuned vibration unit 85 HZ
89-01-07000	Handset
890409-1000	Pressure Reduc. Valve
891311-14	Oxygen Bottle
8921082G5	Water heater
892480	Extinguisher, Water
893410-0450	Fire Detection Unit
895-35077	Cylinder & Regulator O2
896417-10	Oil Tank Assy
897400-7	Fuel Pump
897889-2	Extinguisher, Fire APU 600-65904-3
89794077	Cylinder & Valve Assy
898052	Fire Extinguisher
898626-4	Regulator Valve
899074-1	Extinguisher, Fire Cont (601-65910-9)
8DJ125LWR3	Indicator Fuel Flow
8DJ125LXD4	Indicator Fuel Flow
8DJ131AAB1	Indicator Tachometer Triple
8DJ131LAV1	Indicator Triple Tachometer
8DJ88LWY3	Indicator, FF
8ES005421-09	Power Supply Wing Strobe
8SC0043-013	Windshield LH
8SC0072	Indicator Power Monitor AC
8SC1160-3	Valve Vent Shutoff
8TJ50GAS5	Fuel Flow Meter
8TJ62GBZ3	Fuel Flow Transmitter
8TJ85GAZ1	Transmitter Fuel Flow
8TJ85GCG2	Fuel Flow Transmitter
8TJ92GAA2	Transmitter, Liquid Quantity
900/D51506	CVFDR Voice/Data
9000250024	PC Board
90-0408-10	Gearcase Motor
900-700-035-35	Oxygen Cylinder assy
900-700-037-02	Bottle, Oxygen
900-700-048-28	Bottle Crew O2
900-700-048-28-1	Cylinder Assy Crew Oxygen
90087-401	Faucet Assy
90-10072-2	Entry Door Snubber
903-1341	Microphone Electret (Blade Mount)
903-1342	Microphone Electret (Blade Mount)
9037B0001-03	Landing Gear Lever
9037B0001-04	Landing Gear Lever
90-384036	VHF Comm Antenna
9043105-4	Ignition lead
9043185-13	Ignition Cable
9043185-14	Lead Assy Ignition
9043185-15	Ignition Cable
9043185-16	Ignition Cable
9045000-1	Exciter, Ignition
9045330-2	Exciter, Ignition
9047840-2	Exciter Ignition
9047840-2A	Exciter Ignition
9049400-1	Exciter Ignition

PARTNUMBER	DESCRIPTION
9049400-1B	Exciter Ignition
9049860-1	Ignition Exciter
9049860-10	Ignition Unit
906-10000-4	Computer Stall Warning
9-114-06	Transmitter Oil Fuel
9-231-07	Transmitter, Fuel Flow
9-231-15	Transmitter, Fuel Flow
9-231-23	Transmitter Fuel Flow
93A100-80	Recorder Cockpit Voice
93-A100-80	Recorder, Cockpit Voice
93-A100-83	Cockpit Voice Recorder
93A151-20	Control Gray
93-A152-30	Cockpit Coice Recorder Control Box
93-A152-50	Control Panel, CVR
940-605-31	Fuel Flow Indicator
940-605-32	Fuel Flow Indicator
945-11	ACW BPCU
945-12	Bus Power Control Unit
9-464-02	Indicator Fuel Flow
9-464-21	Fuel Flow Indicator
9-464-87	Indicator, Fuel Flow
94796-02	Shock Mount
9501501-4000	Vacuum toilet leak tester
9506111-517	PSU with LS
95218-07	Isolator Assy, Top, Fwd
95218-12	Torque Tube
95218-14	Isolator Assy
95218-15	Isolator Side, Fwd, LH
95218-22	Isolator, Aft, RH
95218-23	Isolator, Aft, LH
9550176020	H.E. Generator
955RGS1	Yaw Rate Gyro
9580113010	Starter
9599-607-11118	Radio Altimeter
9599-607-12157	Indicator Radio Altimeter
9599-607-12161	Indicator Height
9599-607-14108	Radio Altimeter
9599-607-14547	Radio Altimeter Transceiver
9599-607-14562	Transceiver, Radio Altimeter
9599-607-14931	ERT-530A Transceiver Unit
9599-607-18503	Transceiver ERT160
96042-08	Mount assy, Aft, Engine
9612660321	Symbol Generator ECAM
965-0476-088	Computer, GPWS
965-0686-001	Gpws Comp
965-0876-030	GPWS Computer
965-0976-020-214-214	EGPWS Computer
965-0976-040-214-214	EGPWS
965-0976-060-216-216	EGPWS
965-1076-040-210-210	EGPWS MK7
965-1186-008	EGPWS Computer
965-1190-020	EGPWS/GPS Computer
965-1220-022	EGPWS
96774-18-1814	Torque Transmitter
969-6013-001	Ice Probe
969-6019-001	Controller
9700-A1A-YYON	Oxygen Bottle

PARTNUMBER	DESCRIPTION
9700-C1A-BF20B	Oxygen Cylinder
9700-C1A-BF23A	Bottle Oxygen
9700-G2A-BF10A	Oxygen bottle assy
97280-120	VALVE, SOLENOID
976J252-8	AC Generator
979990-1	Temperature Valve
97A27003000007	Gage, Force/Strain
980-4100-DXUN	Recorder Flight Data
980-4100-DXUS	Flight Data Recorder
980-4120-DXUN	FDR Flight Data Recorder
980-4700-001	Recorder Flight Data
980-4700-003	Solid State Flight Data Recorder
980-4700-042	Flight Data Recorder
980-6005-076	Cockpit Voice Recorder
980-6005-077	CVR
980-6020-001	Solid State Cockpit Voice Recorder
980-6022-001	CVR
980-6116-004	Microphone Monitor
98070-1	Valve Fill
980-9800-817	Tape Reproducer
981-6009-014	Recorder Flight Data
98D07103000000	Dynamometer Safety Stay
98D26203002002	Test Tool Engine Fire Extinguishing system
98D26203002004	Test Tool Eng Fire Extinguisher system
98D27303003001	Check tool Aileron , Elevator , Rudder
98F34103001000	Adapter Pitot Probe
99-389014-3	Torque Pressure Transmitter
99-8025-6000	Fire Detection Test Unit
A06B00	Actuator
A06C00	Actuator Elec
A1600	Extinguisher, Fire
A301-1	Audio Selector Panel
A301-1BG	Control Communication
A42706-423	Panel Electric
A42713-409	Panel Airconditioning
A44700-009	Spoiler Actuator
A4503M8-1	Control Panel Landing Gear
A-5651	Overspeed Govenor
A-5655	Valve, Feather
A-5656	Pump, High Pressure
A-5659-1	Constant Speed Unit
A5659-2	Constant Speed Unit
A-62080-6	4317A
A-701D	Reverse Curr Relay
A-770N	Relay
A-770Q	Relay
A829700-5	Fire Extinguisher Bottle
A-957E	Relay, Automatic
A957G	Relay
ABS-61-2274-1	Battery Pack
AC61552	Compressor
AC63880	Valve, Control Brake
AC65054	Proximity Switch
AC69576	Solenoid Valve
AC69965-3	Valve, Brake
AC70028-4	Dual Servo Valve Assy
AC70071	Brake Metering Unit

PARTNUMBER	DESCRIPTION
ACA1616	Lip Intake, Element Heater
AC-A358-1D31	Valve Assy
ACM18304	Filter
ACM30492	Master Cylinder
ACM30662	Wheel Speed Transducer
ACP2531AB04	Audio Panel Control
ACP2788AF01	Audio Control Panel
ACPSD767-1	Interface Unit, Fuel Quantity
AE1410CA1	Fan Avionics Exhaust
AE1708CA0	Electrical Fan Motor
AE20768	Anti Skid Control Unit
AE20824	Anti Skid Control Unit
AE208274-2	Anti Skid Control Box
AE20874-1	Anti Skid Control Unit
AE20874-2	Dornier Anti Skid Control Unit
AE709261-2	Hose Assy
AG34	Generator Tacho
AH2542AB02	Handset
AH2542B	Panel Handset PNC
AHM10280	Cylinder Assy
AHM10351-3	Sensor
AHM10385	Cylinder Assy
AK2542CL04	Attendant Keyboard
AK-350	Encoder Altitude
AL00601	Actuator, Linear
AMS43	Audio Control Box
AN/USM-488	Test Set
APE4190-014	Electronic Clock
APE4190-040	Electronic Clock
APS40-1	Power Supply
APT-75-1000-4000SW	Transmitter, Pressure
APT-76-1000-100DW	Transducer Oil Pressure
APTE-133-1000-300	TX Pressure
APTE138-150G	Transmitter Oil Pressure
AR4709-3	Cockpit Controller
AR4714-7	Door Strike
AR4717-11	Strike
AR4717-7	Door Strike
AR6460M2MOD3	Actuator Rotary
AR7077M3	Actuator Rotary
AR7077M3MOD1	Actuator Rotary
AS010SSIM1A-A1 Rev A	Sensor Simulation Board
AS21-5-7	Cargo Hook
ASH500-1P	Static Inverter
ASH584-5	Inverter Static
AT420100	Chronometer Digital
AT6421R1	Chronometer Digital Pilot
AV13J5147	Valve
AV16B1760B	Fuel Shut off valve
AV16E1209D	Valve Fuel S/O
AV17B3193C-3	Valve Motorized Butterfly
AV2014595	Oxygen Bottle Portable
AV24B1318D-1	Shut Off Motor Assy
AV24B1343D	Valve, Fuel
AV-31-1	Actuator
B03AA1031	Valve Distributor Dual
B03AA1040	Valve

PARTNUMBER	DESCRIPTION
B1250000	Back Up Battery
B13-944-22-00-0	Clock
B19030FB05	Vemd, EC120 (Vehic Engine Manag Display)
B5GM0	Computer Logic
B90C13	Heater Assembly
BA08006-1	Ballast DC Inverter 28VDC (Single Lamp)
BA08006-28-1	Ballast DC Inverter 28VDC (Dual Lamps)
BA1920EF	I/C
BA21741GSR-2	Fire Extinguisher
BA27-01	Battery
BC80A-9	Blower Cabin Vent
BH-1020-24-160-CS	Inverter
BHC1020-1	Hydraulic Control Unit
BHC1021	Valve Block Spoiler
BJ1977A	Box Junction
BJ2620A	Junction Box
BP-1010-24-8D	Bus Bar Protection Unit
BP-1010-24-8E	Bus Bar Protection Unit
BR9000-21	Ballast, Non Dim-Universal
BSL0014-501	Fuel Filter Switch
BTS/03A	Emergency Battery
BTS89A	Battery emergency
BYLF51514	Sensor Temperature Cabin
BYLF-51514	Sensor Temperature Cabin
C-07202-2	Coaxial Control Shak
C11BA0102	Pump
C12424AE	FGCP
C12848DA01	Radio Management Panel
C12850AC02	Fight Control Unit
C12850BC02	Flight Control Unit
C14135CA	Air data probe
C16177AD	Sensor, Angle of Attack
C16221AA02	Integ Standby Instrument System
C16221GD04	Unit Control
C16363AA	Sensor Angle of Attack
C16370AA	Indicator
C166001-0813	Oxygen Cylinder Assy
C166001-0817	Oxygen Cylinder
C16769DA01	ISIS
C16769KA01	Standby Altimeter
C20005	Rear Wheel
C23954-106	Shock Absorber Assy
C24589000-2	Uplock Box
C4E	Compass
C5221	Cargo Door Actuator
C5C	Compass Standby
C-5C	Compass Magnetic
C-5L	Standby Magnetic Compass
C-5M	COMPASS, DIRECTIONAL
C6WF1003-3	LH Inboard Trailing Flap
C6WF1003-4	RH Inboard Trailing Flap
CAU2533AB03	Remote Control Audio Unit
CAU2533AC01	Remote Control Audio Unit
CAU2583AC01	Remote Control Audio Unit
CB-2100-T6-D	Magnetic Compass
CG1042AB03	IRS Inert Ref System
CG1042AB04	Mode Select Unit

PARTNUMBER	DESCRIPTION
CG7G0-10	Smoke Detector
CH92043-2	Exciter Ignition
CH92043-3	Exciter Assembly
CMK80-01	Switch Pressure
CP1285A	Switch, Selector TFAP15
CP1285D	Control Radio Set
CP1976A1	Interconnection Box
CS601-60	Switch
CT2542AG02	Handset
D05A00	Valve, Drain
D1199-2	Propeller Control Unit
D22567000	Actuator, Nose Landing
D26	Voltage Regulator
D2887-355C	Actuator, Thermal
D3137L-B-2-1-C	Radio Magnetic Indicator
D494-14-001	Selector Landing Gear
D-5604-3	Synchrophaser
D717-01-100	Battery Pack Assy
D97606MODA	Trim Actuator
DB1567AF	Board Assy
DB1567AW	Board Assy
DG1035AB03	Digital/Analog Adapter
DH-1030-115/3-1200-SSIID	Paralleling Control Box
DH-1030-24-1200-CSIIB	Inverter
DH-1030-24-600-CIIB	Inverter, Static
DH1030-24-600-CSIIB	Inverter
DH-7BC	Contactors
DK120	Beacon Underwater Locator
DK449-39	Triple Oil Pressure Indicator
DL1028M60-1	Actuator Linear Trim Rudder
DL1028M61-3	Actuator Linear Trim Tab
DL1326M185-4	Actuator Linear Fuel Shutoff
DL1422M1-1	Actuator Linear Trim Aileron
DL1422M1-2	Actuator Linear Trim Rudder (EMB-312)
DL1422M1-3	Actuator Linear Trim Elevator
DL2033M2-2	Actuator Speed Brake
DL2033M4	APU Air Inlet Door Actuator
DL2033M4-3	APU Air Inlet Door Actuator
DL3827M1-31	Actuator Trim Tab
DL3827M1-37	Actuator Trim Tab
DL3827M1-57	Actuator Trim Tab
DL3933M1-1	Actuator Linear Trim Roll
DL3933M2-10	Actuator Linear Trim Pitch
DL3933M2-10MOD1	Actuator Linear Trim Pitch
DL3933M2-11	Actuator Linear Trim Pitch
DL3933M2-11MOD1	Actuator Linear Trim Pitch
DL3933M2-13	Actuator Linear Trim Pitch
DL5040M6	Actuator Pitch Trim
DMELT8-1	ELT
DMNI50-2-1	DME Antenna
DN7430	Detector Level
DN7440	Low Level Detector
DON670T2B2F	Relay Main Pump
DPS350	Pitot Static Leak Tester
DR7660M2	Actuator, Rotary
E120-0101	Remote Frequency Indicator NH90
E120-0201-MOD.02	Remote Frequency Indicator Tiger UHT

PARTNUMBER	DESCRIPTION
E120-0202	Remote Frequency Indicator Tiger HAC/HAP
E120-0202-MOD.02	Remote Frequency Indicator Tiger HAC/HAP
E120-0203-MOD.02	Remote Frequency Indicator Tiger ARH
E120-0204-MOD.02	RFI Tiger (HAD Model)
E120-0301-MOD.03	Remote Frequency Indicator NH90 Netherlands
E120-0302-MOD.02	Remote Frequency Indicator NH90 Germany
E120-0302-MOD.03	Remote Frequency Indicator NH90
E120-0303-MOD.03	Remote Frequency Indicator NH90 Italian Navy
E120-0304-MOD.03	RFI NH90 Australia
E120-0305-MOD.03	Remote Frequency Indicator NH90 New Zealand
E42037	Rudder Horn
E4AMO	Dynamometric Rod
E8527D	PS Analog Signal Generator
EA1065AW-2315	Transmitter Liquid Quantity
EA-1409-1Z	Indicator Vertical Speed
EA470-3518	Fuel Quantity Transmitter
EA470-3587	Transmitter
EA470-3710	Probe
EA470B3588	Fuel Quantity Transmitter
EA5172-1L-SAB	Air Speed Indicator
EAMBC8816-409	Bungee Control Unit
EASPC8503-403	Stall Protection Computer
EATPI8521-401	Indicator Temp Pressure
EE0033	Standby Battery
EE-0033	Standby Battery
EE0041	PCB
EH3171	Power Pack
ELT-10	Emergency Locator Transmitter
ELT96A2560000000	Emergency Locator Transm
EVAC2423FD	Ground Cooling Fan
EVR716-01-0200A	VHF Tranceiver
EVR716-11-0300A	Transceiver HF Com
EVTA1925B	Fan
F7941-004-423	Panel Assy, Airco
FE188-005	Damper
FE205-000	Damper Rudder
FE255-000	Damper Rudder
FE309100000	Pedal Adjustment Assy
FMC0102-00	FMC/CFP Interface Test Adapter
FR2212	Smoke Detector
Fuel Nozzel PW119	Fuel Nozzle Set
Fuel Nozzle Set	Fuel Nozzle Set
G4100	Gable NAV/Comm Ctrl Panel
G6113-03	CTL Comm/Nav
G6207-03	Control Box Dual WX-Radar
G-6250-4	Light Search Controllable
G6773-02	Control Unit VHF NAV/DME
G6773-04	Control Unit VHF NAV/DME
G7400-23	VHF Comm Control Panel
G7493-02	Controller, TCAS
G8400A24	Light Navigation Rotating Warning
GC1010-24-5DIII	Generator Control
GC-1010-24-5DIV	Generator Control Unit
GC-1010-24-5DV	GCU
GC481-0090-5	Cylinder Assy, Small, Oxygen, Crew
GCSG503-4A	Generator Control Unit
GE16720-010-2	Light Power Supply

PARTNUMBER	DESCRIPTION
GM10503	Transducer
GMT4150	Clock
GMT4150-1	Clock, Electronic
GMT4190-011	Clock Flight Dat Entry
H10058002	Valve, S/O Rudder
H1-10AIR	Extinguisher Portable Halon
H140ABM1	Indicator Attitude (H140)
H140ABM2	Indicator Attitude (H140)
H140CPM1	Indicator Attitude (H140)
H140JDM	Horizontal Gyro
H140JUM2	Indicator Attitude (H140)
H140KRM	Indicator Attitude (H140)
H150AKM1	Indicator Attitude Standby
H188C	Indicator, Surface Position
H301AKM1	Indicator Attitude (H301)
H301BAM	Indicator Attitude (H301)
H321ALM1	Indicator Attitude (H321)
H321BDM1	Indicator Attitude (H321)
H321BHM1	Indicator Attitude (H321)
H321CZM	Indicator Attitude (H321)
H321EHM	Indicator Attitude (H321)
H341ANM1	Indicator Attitude (H341)
H914A	Actuator Linear Trim Rudder
H914A Mod 1	Actuator Linear Trim Rudder
HB212-5	Heater, Blanket
HC361B0543008	Engine FW Bleed Duct
HC361H0080000	Engine FW Bleed Duct LH
HC361H0081000	Engine Bleed Duct
HC361J0051004	Engine Bleed DUCT
HG1050AC04	IRU
HG1050AD04	Inertial Reference Unit
HG1050AD05	Inertial Reference Unit
HG1050AD10	Inertial Reference Unit
HG1050AD15	IRU
HG1050AE09	IRU
HG2001AC02	Inertial Reference Unit
HG2010AC02	Attitude Heading Reference Unit
HG480B100	Air Data Computer
HP1416100-7	Valve, Flap
HP610100-2C10-1	Manifold
HPK67	Compass
IAS00012-01	Elec. Latch Cockpit Door
IAS-00012-05	Latch Assy
J5BM1	Rate Gyro
J5BM2	Rate Gyro Assy
JA020003	Hot Jug
JA031003	Hot Jug
JG1209AC01	Altimeter
K966002	Compressor
KCA0106W	Compass magnetic
KCA0113W	Compass Standby
L13471-40	Water Boiler
L944772	Low Torque Switch
L94E31-651	Valve, Refuelling
LA11A2104	Actuator Linear
LA11A2118	Actuator Linear Aileron Trim Tab
LM431-3	Bracked Assy, Mount

PARTNUMBER	DESCRIPTION
LM-431-83-V	Mount, Top Front
LM-431-84V	Mount, Engine
LM-431-89-V	Bonded Sandwich Mount
LM-431-90-V	Bonded Sandwich Mount
LM-431-98-V	Torque Tube
LM-431-SA18	Mount, Rear
LM-431-SA32	Mount Assy, Front Top
LM-431-SA36	Front Side Mounting Assembly
LM-431-SA50	Torque Assy
LM-431-SA54-V	Bonded Rod Assy
LM-431-SA55-V	Bonded Rod End Link Assembly
M5000-08	Indicator Turn and Bank (RCA30-08)
M5000-10	Indicator Turn and Bank (RCA30-10)
MA30A1001	Motor Operated Valve Actuator
MC10-04-111	Crew Oxygen Mask Regulator
MC10-13-03	Mask
MC10-15-122	Oxygen Mask
MC10-25-104	Oxygen Mask
MC20-004	Mask
MC20-006	Oxygen Mask
MF10-08-01	Full Face Mask
MF20-003	Full Face Quick Donning
MF36-3909-30Z2	Hydraulic Motor
MF9-3911-30ZE	Motor
MI-585183	Indicator Radar (for Primus 50)
MI-585300-1	Receiver Transmitter RT5001
MI585350-5	Transceiver Radar WR-800
MI-585350-5	Transceiver Radar WR-800
MI-585350-6	Transceiver Radar WR-800
MI585351	Indicator Radar WI-800
MI-585351-1	Indicastor Radar WI-800
MI-585351-2	Indicator Radar WI-800
MI-585353	Antenna Pedestal (WA-800)
MI-585467	Pedestal, Radar Antenna
MML-OC19AU	Indicator Temperature Engine Cage
MODEL_AV-35A	Pax Life Vest
MODEL_AV-35B	Pax Life Vest
MODEL_AV-35H	Pax Life Vest
MODEL_AV-35H_CREW	Crew Lift Vest
MODEL_ILV-20	Infant Life Vest
MPR8R01	PCB XE-MPR8-R1
MRA023	Mask, Oxygen
MS24569-1	Temperature Indicator
MS2474	Flight Attendant Unit
MS25277-1-7079	Anti-Collision Light
MS28034-1	Sensor Element
MZ4306000-12	Spoiler Servo Control
NA135APH50	Selcal Decoder
NB01201	Exciter Ignition
NPX138-000	Transceiver VHF FM
NPX138N-000	Transceiver VHF FM
OMP3863-5	Cylinder Assembly
P0723E105PWC	Life vest ,Pilot
P10-0090002	Annunciator, Flap/Slat
PC125-12B	Inverter Static
PC250	Inverter Static 250 VA
PC-251-2A	Static Inverter

PARTNUMBER	DESCRIPTION
PRO2400-1	Ametek Reservoir Assembly
PS304-1	Static Inverter
PS-304-1	Inverter Static
PSA-15A	Linear Motion Transducer
PSD 120-1	Test Set Fuel Quantity
PSD 120-2	Test Set Fuel Quantity
PSD 30-2	Test Set Fuel Quantity
PSD 30-2AF	Test Set Fuel Quantity
PSD 30-2F	Test Set Fuel Quantity
PSD 30-2F	Test Set Fuel Quantity
PSD 30-2G	Test Set Fuel Quantity
PSD 340-1	Test Set Fuel Quantity
PSD 40-1	Test Set Fuel Quantity
PSD 60-1	Test Set Fuel Quantity
PSD 60-2	Test Set Fuel Quantity
PSD 60-2R	Test Set Fuel Quantity
PSD 60-510/511	Cable Test Fuel Quantity
PSD 757/767-1	Test System Fuel Quantity
PSD 767-1	Test System
PSD DASH 8-1	Test Set Fuel Quantity
PSD600-1	Test Set Fuel Quantity
PSD737-2	Adapter Cables PSD40-1
PT-0109A	Transmitter
PT-LCD932U	Video Projector
PU-057C-09-06	Engine Data Multiplexer Assy
QA07390	Main Filter Pack
QAR200-03-00	Quick Access Recorder
R0032-2025	Co2 Cylinder
R25-1M2CW	Anti Collision Light
R810510-3	Actuator Assy - Variable Pitch
RCA22-7	Gyro Horizon
RCA70	Valve, Altimetric
RD-AV3001-35	Video Control Unit
RD-AV9810-01	Monitor LCD
RD-AX7271	Tape Reproducer
RD-AX7281	Control Panel Tape Reproducer
RTPA.003A	Regulateur Electronique
S100-0080-00	Cockpit Voice Recorder
S109-3 Amdt B	Cargo Sling Release Mechanism
S-11150-1301	Vest Life Preserver Model AV-35
S-11250-1300	Vest Life Preserver Model AV-35
S-11851-1300	Vest Life Preserver Model AV-35
S14-A-PDC/5	GNSS Splitter
S1821502-02	ELT Transmitter 406AF
S1822502-02	406 AF-H ELT
S-410-01	Oil Pressure Transmitter
S483-1-16	Indicator Temperature Outside Air
S5411275900001	Air Intake
S5741003800895	Leading Edge
S5741004200295	Leading Edge
S6190-60060-041	Panel, Control
S65-5366-735	TCAS Omnidirectional
S67-1575-20	Antenna, GPS
S800-2000-00	Flight Data Recorder
S800-2000-01	Recorder Flight Data SS
SC5083-1	Servo Control
SC7112-3B	Servo Control Main

PARTNUMBER	DESCRIPTION
SCA100	Amplifier Speed Control
SD9422-01	Smoke Detector
SD9422A0A0	Smoke Detector
SEDL-OC2P	Indicator Torque
SEL-OC19DW	Indicator Temperature Interturbine
SEL-OC29DF	Indicator RPM Prop
SEL-OC29DY	Indicator NP
SEL-OC29EC	Indicator NH % RPM
SEL-OC2N	Indicator Torque
SEL-OC8J	Indicator Fuel Flow
SETL-OC420F	Indicator Cabin Pressure
SFA13M1R0A	Blade Propeller
SIC5059-13-20	Computer, Fuel Quantity
SIC5059-14-20	Computer, FQTY
SM600BA75A1	Circuit Breaker
SPC-10	Static Inverter
SPC60A	Inverter
SRDL-OC12F	Indicator Dual Hydraulic QTY
SRDL-OC7E	Indicator Pressure Hydraulic
ST104A	Oil Pressure Transmitter
ST-106AB	Pressure Transmitter
ST-107Q	Transmitter, Hyd Pressure
ST-4H	Transmitter Pressure
SYLZ50920-1	Control Unit Windshield
SYLZ50970	Control Unit Windshield
T-101-F16	Tank Unit Fuel
T-102-F16	Tank Unit Fuel
T5-2002-401-00	Tensiometer
TCCA-PDA-NI-H949B	Actuator Linear
TS-1843A/APX	Test Set Transponder
TT1000A	Test Set Temperature
TT1200	Testset Turbine Temp
TT1200A	Turbine Temp Test Set
TY1542-22	Lock Actuator
V44700-205	Bleed Valve
VL35L	Linear Actuator
VOLA HV6-20	Desk Mounted Kitchen Faucet With Ceramic Cartridge
VST170-1	Ground Outflow Valve
VT-O107H	Transmitter, Hydraulic Pressure
W33-7545-10	Clock Type A-31A-2
WG1368-0206-041	Shaft Assy
WL1001KCA1	Compass Stdbby
WL101AMS1	Altimeter/Airspeed Standby
X00001-413	Detector Assy
Z220H0002110	Control Unit
Z272H0000114	MCU Master Control Unit
ZCV183-4	Valve Pilot Check
ZSV50	Valve Motive Fuel Shut Off