

### 2018 Exchange pool items ATR

PART NUMBER	DESCRIPTION	CONDITION
02360-601-1	INTERFACE UNIT	SV
02360-601-1	INTERFACE UNIT	SV
02360-601-1	INTERFACE UNIT	SV
02360-601-1	INTERFACE UNIT	SV
06DB06-TYP889A	INDICATOR, HYDR PRESSURE (TRIPLE)	SV
101809-02	SWITCH, ALTITUDE	NE
101809-02	SWITCH, ALTITUDE	NE
101CC01A02	CONTACTOR - SINGLE POLE	SV
1040B25-1	VALVE, CROSSFEED	OH
10S29090013-1	FUSE, HYDRAULIC	AI
10S29090013-1	FUSE, HYDRAULIC	AI
10S29090013-1	FUSE, HYDRAULIC	AI
115645-03	MODULE, OXYGEN	SV
115645-03	MODULE, OXYGEN	SV
115645-03	MODULE, OXYGEN	SV
1173T0319	SENSOR, OVERHEAT	SV
1550A010000	VENTURI (HP)	SV
156	TRANSFORMER / INVERTER	SV
156	TRANSFORMER / INVERTER	SV
20-035008-043	CONTROLLER, AIR LEAK DETECTION	SV
201-25109Y00	VALVE, PARKING	SV
201-25109Y00	VALVE, PARKING	SV
2340358-1	CONDENSER	BE
242082-4	VALVE, SOLENOID	NE
25890	DIVIDER, FLOW	SV
25910-8	PUMP, EJECTOR (WASTE / FUEL)	SV
25910-8	PUMP, EJECTOR (WASTE / FUEL)	OH
2593379-002	COMPENSATOR, DUAL REMOTE	SV
291-10	LIGHT, NAVIGATION (REAR - WHITE)	NE
292-11	LIGHT, STROBE	AI
2940	ACTUATOR - FUEL CROSSFEED VALVE	SV
2LA456267-00	EQUIPMENT MODULE	SV
30005-0000-35	CONDITIONER, TORQUE SIGNAL	SV
301-1155	LIGHT ASSY - EXIT	NS
301-1155	LIGHT ASSY - EXIT	NS
3012515	HOUSING	NS
3035969	THERMOCOUPLE	NE
3037743	SENSOR	NE
3038555	COUPLING	NE
3039884	CABLE	NE
3041279	THERMOCOUPLE	OH
3044609-02	HOSE FUEL MANIFOLD SECONDARY (RH)	SV
3044610-02	HOSE FUEL MANIFOLD SECONDARY (LH)	SV
3075879-01	DATA COLLECTION UNIT	NE
3108502-02	VALVE, CHECK - LOW PRESSURE	SV
3108502-02	VALVE, CHECK - LOW PRESSURE	SV
3108502-02	VALVE, CHECK - LOW PRESSURE	SV
3108502-02D	VALVE ASSY	SV
3108502-02D	VALVE ASSY	SV
3116942-01	SENSOR, TORQUE	NE
3117949-04	FLOW DIVIDER & DUMP VALVE	SV
3119252-01	THERMOCOUPLE	OH
3119252-01	THERMOCOUPLE	OH
3119252-01	THERMOCOUPLE	OH
3119252-01	THERMOCOUPLE	OH
3119252-01	THERMOCOUPLE	OH
3119252-01	THERMOCOUPLE	OH
3119252-01	THERMOCOUPLE	OH
3119252-01	THERMOCOUPLE	OH
3119252-01	THERMOCOUPLE	OH



## 2018 Exchange pool items ATR

622-5137-001	ANTENNA FLAT PLATE	SV
622-6137-201	RECEIVER, VHF NAV	SV
622-6137-201	RECEIVER, VHF NAV	SV
622-6152-031	TRANSCEIVER, VHF	SV
622-6520-003	CONTROL PANEL, VHF	SV
622-6522-001	CONTROL PANEL, ADF	AI
622-6523-205	CONTROL PANEL, ATC	AI
622-6523-207	CONTROL PANEL, ATC (DUAL)	SV
622-6523-207	CONTROL PANEL, ATC (DUAL)	SV
622-6523-207	CONTROL PANEL, ATC (DUAL)	SV
622-6523-207	CONTROL PANEL, ATC (DUAL)	SV
622-6523-207	CONTROL PANEL, ATC (DUAL)	SV
622-6523-207	CONTROL PANEL, ATC (DUAL)	SV
622-6523-207	CONTROL PANEL, ATC (DUAL)	SV
622-6523-207	CONTROL PANEL, ATC (DUAL)	SV
622-6523-207	CONTROL PANEL, ATC (DUAL)	SV
622-6523-207	CONTROL PANEL, ATC (DUAL)	SV
622-6523-207	CONTROL PANEL, ATC (DUAL)	SV
622-6523-207	CONTROL PANEL, ATC (DUAL)	SV
622-9210-007	TRANSPONDER, MODE S	BE
622-9614-103	CONTROL PANEL, ATC/TCAS	SV
622-9614-103	CONTROL PANEL, ATC/TCAS	SV
700-1710-001	EGPWS MK8 CONFIGURATION MODULE	NE
7002260-722	SERVO DRIVE	SV
7002638-907	INDICATOR, TAS/TAT	SV
7002638-907	INDICATOR, TAS/TAT	SV
7002860-909	INDICATOR, AIRSPEED (MACH)	SV
7003974-606	COMPUTER, FLIGHT GUIDANCE	SV
7003974-608	COMPUTER, FLIGHT GUIDANCE	SV
7005973-912	CONTROLLER, REMOTE INSTRUMENT	SV
7006921-302	CONTROL PANEL, WEATHER RADAR	SV
7010133	VALVE, FLUX	SV
722-139-1	SENSOR, HIGH LEVEL	NE
722-404-2	SENSOR, HIGH LEVEL	SV
722-404-2	SENSOR, HIGH LEVEL	SV
722-404-2	SENSOR, HIGH LEVEL	SV
722-404-2	SENSOR, HIGH LEVEL	SV
722-404-2	SENSOR, HIGH LEVEL	SV
722-404-2	SENSOR, HIGH LEVEL	SV
722-404-2	SENSOR, HIGH LEVEL	SV
722-404-2	SENSOR, HIGH LEVEL	SV
722-404-2	SENSOR, HIGH LEVEL	SV
722-404-2	SENSOR, HIGH LEVEL	SV
722-404-2	SENSOR, HIGH LEVEL	SV
722-404-2	SENSOR, HIGH LEVEL	SV
722-404-2	SENSOR, HIGH LEVEL	SV
722-404-2	SENSOR, HIGH LEVEL	SV
749-188	INDICATOR, PRESSURE (TRIPLE)	SV
766-047-2	PROBE, FUEL QTY	NE
784-717-2	SWITCH, THERMAL	SV
810591-1	BULKHEAD, PROP ASSY	BE
810591-1	BULKHEAD, PROP ASSY	NE
810591-1	BULKHEAD, PROP ASSY	BE
810592-1	SPINNER ASSY	SV
810592-1	SPINNER ASSY	NE
810592-1	SPINNER ASSY	AI
815531-1	COVER, DOME	SV
815531-1	COVER, DOME	SV
815585-6	ACTUATOR ASSY	SV
815587-1	OIL TRANSFER TUBE	BE
8210-091	GOVERNOR, PROP OVERSPEED	SV
8210-160	GOVERNOR, PROP SPEED	OH
8316-103-00-10	TRANSMITTER, FUEL TEMPERATURE	SV
863521-01	EXTINGUISHER, FIRE (PORTABLE)	NE
8ES005588-00	POWER SUPPLY UNIT (PAX)	NS
93A151-50	CONTROL UNIT, CVR	SV
9407100-06	SEAT PAX (RH)	SV

## 2018 Exchange pool items ATR

9407110-05	SEAT PAX (LH)	SV
9407110-05	SEAT PAX (LH)	SV
95-06-04607-06	HEADSET	NS
95-06-04607-06	HEADSET	NS
95-06-04607-06	HEADSET	NS
95-06-04607-06	HEADSET	NS
98S61003000000	PROPELLER LIFTER	NS
A100400	CONTROL UNIT, DE-ICING (STANDBY)	SV
A100400	CONTROL UNIT, DE-ICING (STANDBY)	SV
A12SA	MEGAPHONE	SV
AH2542AE01	HANDSET HOLDER, CABIN ATTENDANT	BE
AH2542AE01	HANDSET HOLDER, CABIN ATTENDANT	BE
B03AA1020	VALVE, DISTRIBUTOR (DUAL)	SV
B03AA1020	VALVE, DISTRIBUTOR (DUAL)	SV
B07EF2000	VALVE, DRAIN (WATER)	SV
B07EF2000	VALVE, DRAIN (WATER)	SV
B47CA1090	VALVE, SHUT OFF	SV
C-70188-1	POWER SUPPLY	AI
C13159MA	IOM-S	NE
C24295350	VALVE, SOLENOID	SV
C24607000	UPLOCK, LEVER - NLG	SV
D22745000	VALVE, ANTI-SHIMMY (NLG)	SV
D22847000-1	BOX, VALVE	SV
D22897000-3	ACTUATOR - MLG	SV
D23109500A	HARNESS, ELECTRICAL (LH MLG)	NE
D94412	FAN ASSY	SV
DMN25-2	ANTENNA, GLIDE SLOPE	NE
DMNI50-2-2	ANTENNA, DME / ATC	SV
E0564B01	BASE	NE
E0564B01	BASE	NE
E37055M0D1	HORN, ANTI-ICING CONTROL	SV
ED34A340	FLIGHT DATA ACQUISITION UNIT	SV
F46BC0101	CONTROLLER, SMOKE DETECTION	SV
F46BC0101	CONTROLLER, SMOKE DETECTION	SV
G5515P	SPEAKER, COCKPIT	AI
HTE8803	ACTUATOR, SINGLE MOTOR	AI
LA4E20608HM0100	MFC	SV
M10DE0104-R	PIPE, EXHAUST	SV
NP158804-102	WINDOW, CABIN - INNER	NS
PA2532AB01	AMPLIFIER, PAX ADDRESS	SV
S2511016300300	PANEL ASSY	SV
S2521798300000	PANEL	SV
S2711305000000	REVERSER ASSY	NE
S5411060900040	INTAKE DUCT	SV
S5411060900040	INTAKE DUCT	AI
S5751008002851	FLAP ASSY - OUTBOARD	SV
S5761216600401	LOWER PANEL ASSY L/H	NE
S5791207100100	FAIRING (WING)	SV
S9251174900000	PANEL	NS
S95101003YYYYY	HARNESS, ENGINE	SV
VST170A	VALVE, VENTILATION	SV